 


ELECTRONIC KEYBOARD

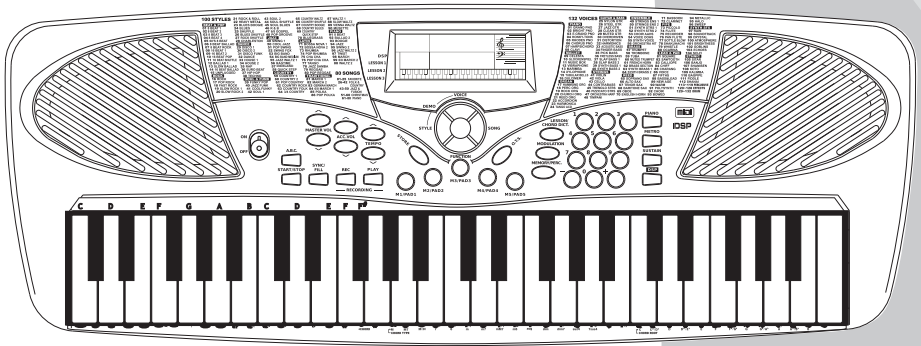

Owner's Manual

THE FCC REGULATION WARNING (for USA)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Unauthorized changes or modification to this system can void the user's authority to operate this equipment.

CAUTION

The normal function of the product may be disturbed by Strong Electro Magnetic Interference. If so, simply reset the product to resume normal operation by following the owner's manual. In case the function could not resume, please use the product in other location.

PRECAUTIONS

PLEASE READ CAREFULLY BEFORE PROCEEDING

Please keep this manual in a safe place for future reference.

Power Supply

Please connect the designated AC adaptor to an AC outlet of the correct voltage.

Do not connect it to an AC outlet of voltage other than that for which your instrument is intended.

Unplug the AC power adaptor when not using the instrument, or during electrical storms.

Connections

Before connecting the instrument to other devices, turn off the power to all units. This will help prevent malfunction and / or damage to other devices.

Location

Do not expose the instrument to the following conditions to avoid deformation, discoloration, or more serious damage:

- Direct sunlight
- Extreme temperature or humidity
- Excessive dusty or dirty location
- Strong vibrations or shocks
- Close to magnetic fields

Interference with other electrical devices

Radios and televisions placed nearby may experience reception interference. Operate this unit at a suitable distance from radios and televisions.

Cleaning

Clean only with a soft, dry cloth. Do not use paint thinners, solvents, cleaning fluids, or chemical-impregnated wiping cloths.

Handling

Do not apply excessive force to the switches or controls.

Do not let paper, metallic, or other objects into the instrument. If this happens, unplug the AC adaptor from the wall outlet. Then have the instrument inspected by qualified service personnel.

Disconnect all cables before moving the instrument.

Panel & Display Description

| | |
|------------------|---|
| Front Panel..... | 4 |
| Rear Panel..... | 4 |
| Display..... | 5 |

Setup

| | |
|-------------------|---|
| Power Supply..... | 6 |
|-------------------|---|

Connections

| | |
|-------------------------------------|---|
| Connecting a pair of Headphones.... | 7 |
| Connecting an Amplifier..... | 7 |
| Connecting a Microphone..... | 7 |
| Connecting a Computer..... | 7 |

| | |
|-------------------------------|----------|
| Playing the Demos..... | 8 |
|-------------------------------|----------|

Playing the Voices

| | |
|------------------------|---|
| Selecting a Voice..... | 8 |
| Sustain..... | 8 |
| Modulation..... | 9 |
| DSP Effect..... | 9 |
| Transpose..... | 9 |
| Piano..... | 9 |

Playing the Styles

| | |
|---------------------------|----|
| Selecting a Style..... | 10 |
| Playing a Fill..... | 10 |
| Sync..... | 10 |
| Accompaniment Volume..... | 10 |
| Tempo..... | 11 |
| Chord Fingering..... | 11 |
| One Touch Setting..... | 12 |

Memory/Percussion

| | |
|-----------------|----|
| Memory..... | 13 |
| Percussion..... | 13 |

| | |
|------------------------------|-----------|
| Chord Dictionary..... | 14 |
|------------------------------|-----------|

Metronome

| | |
|-------------------------------|----|
| Turning on the Metronome..... | 14 |
| Selecting the Beat..... | 14 |

Playing the Songs

| | |
|-----------------------------|----|
| Listening to the Songs..... | 15 |
| Lesson Mode..... | 15 |

| | |
|------------------------------------|-----------|
| Recording and Playback..... | 16 |
|------------------------------------|-----------|

MIDI Functions

| | |
|---------------------|----|
| What's MIDI?..... | 17 |
| MIDI Terminals..... | 17 |

| | |
|------------------------------|-----------|
| Trouble Shooting..... | 18 |
|------------------------------|-----------|


| | |
|----------------------------|-----------|
| Specifications..... | 18 |
|----------------------------|-----------|

Appendices

| | |
|--------------------------------|----|
| Voice List..... | 19 |
| Style List..... | 20 |
| Song List..... | 21 |
| Chord List..... | 22 |
| MIDI Implementation Chart..... | 23 |

Panel & Display Description

 Front Panel

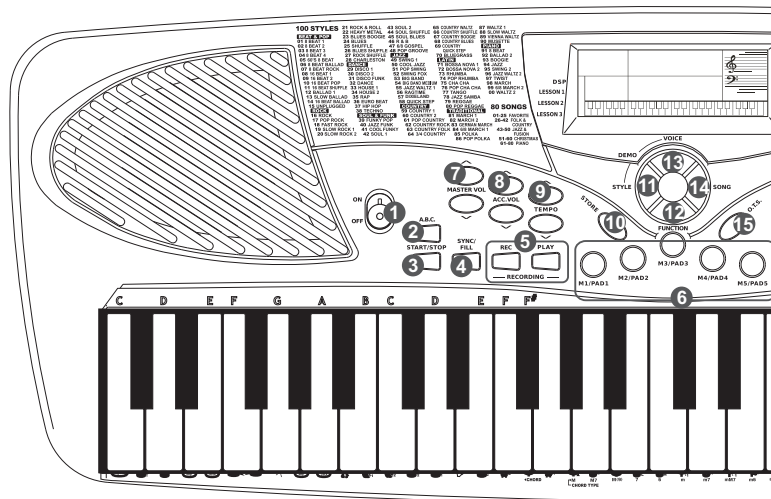

1. POWER ON/OFF

Turn the power on and off.

2. A.B.C.

Turn the Chord Mode on and off.

3. START/STOP

Start or stop playing the song in Song Mode.

Start or stop playing the style in Style Mode.

4. SYNC/FILL

Turn the SYNC START on and off.

Play the FILL

5. RECORDING

RECORD: Enter the Record Mode.

PLAY: Play back the recorded performance.

6. M1-M5/PAD1-PAD5

Recall the memory settings.

Play the percussion sound.

7. MASTER VOL

Adjust the master volume.

8. ACC.VOL

Adjust the accompaniment volume.

9. TEMPO

Adjust the current tempo.

10. STORE

Register the memory.

11. STYLE

Enter the Style Mode.

12. FUNCTION

Change the adjusted function.

13. VOICE

Enter the Voice Mode.

14. SONG

Enter the Song Mode.

15. O.T.S.

Enter the One Touch Setting Mode.

Rear Panel

24. DC 9V

Connect DV 9V power adaptor (optional).

25. PHONES/OUTPUT

 
Connect a pair of headphones.
Connect the audio equipment.

26. USB


Connect to a computer

27. MIC IN

Connect a microphone.

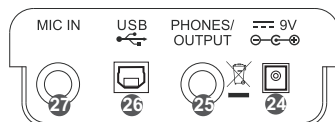

Panel & Display Description

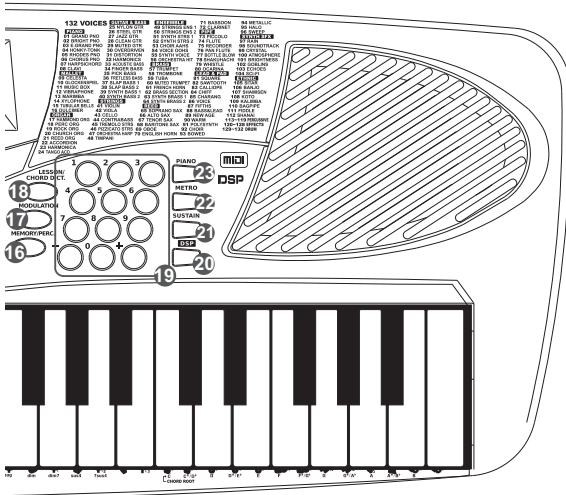 

- 16. MEMORY/PERC.**
Switch the M1-M5/PAD1-PAD5's function between memory and percussion.
- 17. MODULATION**
Turn the Modulation effect on and off.
- 18. LESSON/CHORD DICT.**
Change the Lesson mode.
Enter the Chord Dictionary.
- 19. NUMBER KEYS**
Select the number or adjust the parameters.
- 20. DSP**
Turn the DSP effect on and off.
- 21. SUSTAIN**
Turn the Sustain effect on and off.
- 22. METRO**
Turn the metronome on and off.
- 23. PIANO**
Enter the Piano Mode.

Display

- | | | |
|---|--|---|
| <ul style="list-style-type: none"> 1. DSP 2. LESSON 1 3. LESSON 2 4. LESSON 3 5. CHORD DIRECT 6. AUTO BASS CHORD 7. TREBLE CLEF 8. BASS CLEF 9. BEAT | <ul style="list-style-type: none"> 10. TEMPO/COUNT 11. ACCOMP VOLUME/MASTER VOLUME 12. METRO 13. MEMORY/PERCUSSION | <ul style="list-style-type: none"> 14. RECORD/PLAY 15. ONE TOUCH SETTING 16. SUSTAIN 17. KEYBOARD |
|---|--|---|



This section contains information about setting up your instrument and preparing to play. Please go through this section carefully before turning the power on.

Power Supply

You can power the unit either by batteries or by power adaptor. Follow the instructions described below.

 
 
Using Batteries

6 pieces of C size (SUM-2 or R-14) or equivalent alkaline batteries must first be installed into the battery compartment.

1. Open the battery compartment cover located on the bottom cabinet of the unit.
2. Insert the batteries, carefully follow the polarity markings on the cabinet.
3. Replace the compartment cover, making sure that it locks firmly in place.

Note:

Do not mix old and new batteries.
Always use same types of batteries.
Always remove the batteries from the unit when it is not being used for an extended period of time.

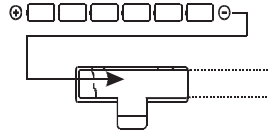



Using Power Adapter

1. First, please make sure that POWER ON/OFF switch of the instrument is set to OFF.
2. Connect the AC adaptor to the power supply jack.
3. Plug the AC adaptor into an AC outlet. And when turning the power OFF, simply reverse the procedure please. This will automatically cut off the battery power supply.
4. Turn the power ON.

Note:

When the keyboard is not in use or in the time of thunderstorm, please disconnect the power for safety purpose.
A prompt voice sounds every two minutes if there is no operation.

  In order to save energy, we have designed the "Automatic Shutdown" function to the keyboard. With this function, the keyboard will shutdown automatically when you have left it idle for more than 30 minutes. If you don't need this feature, just press and hold the [C2] key (the 1st key) and turn it on.

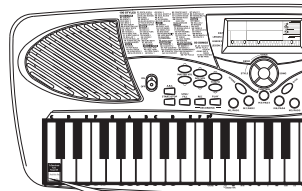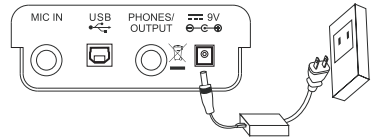

To Deactivate
Auto
Power Off

1. Hold this Key

 
2. Power On

Connecting a pair of Headphones

A standard pair of stereo headphones can be connected to the PHONES jack for private practice or late-night playing. The internal stereo speaker system is automatically shut off when a pair of headphones is plugged into this jack.

Note :

Do not listen with the headphones at high volume for long periods of time. Doing so may cause hearing loss.

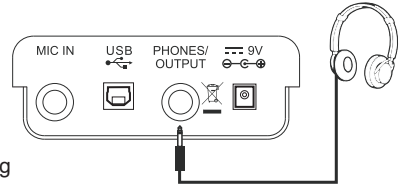


Connecting an Amplifier

Plug an audio cord into the OUTPUT jack. Then plug the other end of the cord into LINE IN or AUX IN of the amplifier.


Note:

 To avoid damaging the speakers, please ensure that the volume has been set to the minimum level before connecting the power and other devices.

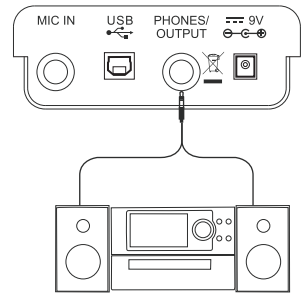


Connecting a Microphone

 You can connect an external microphone to MIC IN jack.

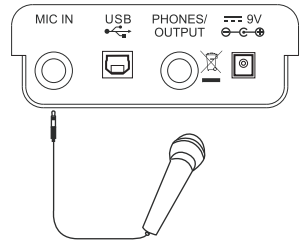

Connecting a Computer

 
The instrument receives and transmits MIDI messages via the USB connector.

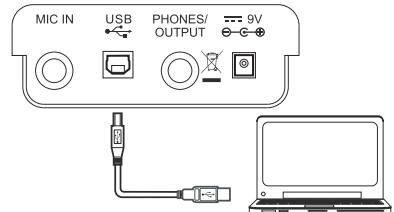

Playing the Demos

The instrument features 80 demo songs.

 1. Press the [STYLE] and [VOICE] buttons simultaneously to start playing the demo.
2. Select a demo song.
Use the number keys, the [+] button or the [-] button to select the desired demo song.
3. Adjust the volume with the [MASTER VOLUME] buttons.
Repeatedly press [MASTER VOL] up or down to increase or decrease the volume. The volume ranges from 0 (no sound) to 9 (Maximum) and the current volume level appears on the display.
4. Press the [STYLE] and [VOICE] buttons simultaneously again or press the [START/STOP] button to stop playing and exit the demo mode.

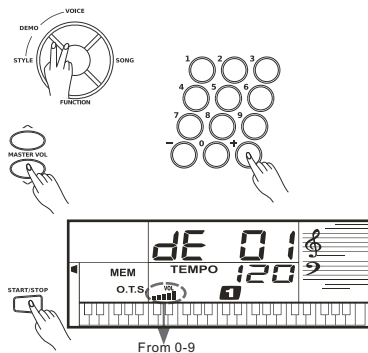

Note:

 
In the DEMO mode, all buttons except START/STOP, TEMPO+, TEMPO-, Number Keys, +/YES, -/NO, MASTER VOL+, MASTER VOL-, POWER ON/OFF will not be available.

Playing Voices

The instrument features 132 voices, including 4 drum kits. Please refer to **Voice List**.


Selecting a Voice

1. Press the [VOICE] button.
Enter the VOICE mode. LCD shows "VOICE" and the voice number.
2. Select a voice.
Use the number keys, the [+] button, the [-] button to select the voice you want to play.
3. Play the voice.
You can play the keyboard and listen to the selected voice.

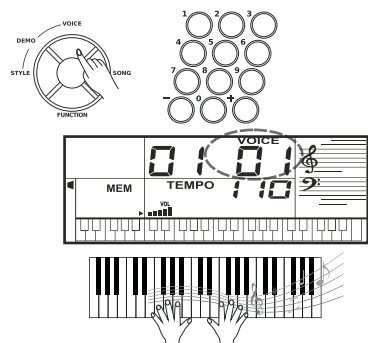


Sustain

 When the Sustain features in ON, all notes played on the keyboard would have a longer sustain. Press the [SUSTAIN] button to turn the SUSTAIN effect ON or OFF.




Modulation

 The Modulation function applies a vibrato effect to notes played on the keyboard. Press the [MODULATION] button while playing the keyboard then you will hear the vibrato effect.



DSP Effect

 
This function allows you to perform the overall sound in a more realistic effect. The DSP effect is set to ON when keyboard power on. Press the [DSP] button to turn on/off the DSP effect.

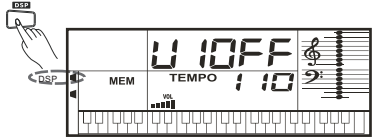

Transpose

Transpose function allows the overall pitch of the instrument to be transposed up or down by a maximum of one octave in semitone increments.

 
1. Press the [FUNCTION] button until "7PS 0" displays.
2. Press the [+] or [-] button to adjust the pitch of the instrument within 6 semitone.
3. Press the [+] and [-] buttons simultaneously to reset the transpose to 0.

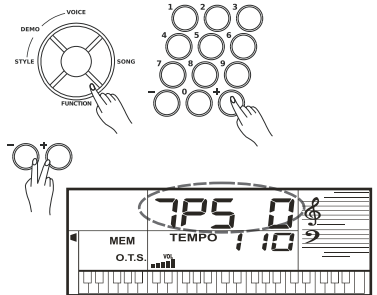

Piano

No matter what setting you've made from the panel, you can instantly call up the piano setting by a single button press.

 1. Press [PIANO] button to enter piano and exit piano mode.
2. In the PIANO mode, you can start a style. Press the [START/STOP] button to play.



Playing the Styles

 
The instrument features 100 styles in a variety of different musical genres. Try selecting some of the different styles (Refer to **Style List**) and play with the auto accompaniment.

Note:

The styles (91-99 and 00) are the piano styles. If you don't turn on A. B. C. and play a chord, the auto accompaniment does not work.

Selecting a Style

1. Press the [STYLE] button.
Enter the STYLE mode. LCD shows "STYLE" and the style number.
2. Use the number keys, the [+] button, the [-] button to select the style you want to play.
3. Press the [START/STOP] button to start the rhythm tracks of the auto accompaniment.

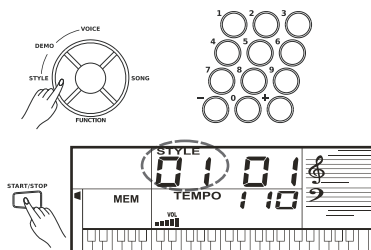


Playing a Fill

Simply press the [FILL] button, while the style is playing. The keyboard inserts a variation, then the original style automatically resumes at the end of the current measure.

Note:

 
For inserting a longer variation, hold down the [FILL] button. The keyboard play the variation until you release the [FILL] button.

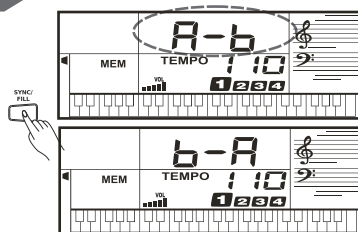

Sync

While the style is not playing, press the [SYNC] button. The black dots below the tempo and the metronome flash, indicating the standby mode of the keyboard.

 
1. If the A.B.C. is OFF, pressing any key will automatically begins to play the style (rhythm track).
2. If the A.B.C. is ON, pressing any key in the left-hand range of the keyboard will automatically begins to play the style (all tracks).

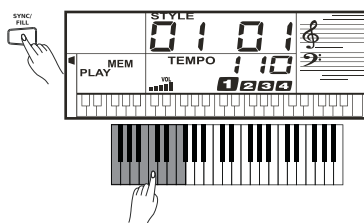

Accompaniment Volume

Adjust the volume of the accompaniment with the [ACC.VOL] buttons.

 Repeatedly press [ACC.VOL] up or down to increase or decrease the volume. The volume ranges from 0 (no sound) to 9 (Maximum) and the current accompaniment volume level appears on the display.

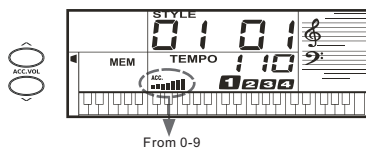

From 0-9

Tempo

 
Each style of the instrument has been programmed with a default tempo; however, this can be changed by using the [TEMPO+] or [TEMPO-] buttons.



1. Use the [TEMPO+] or [TEMPO-] button to change the tempo. The value ranges from 40 to 240.
2. Hold down the [TEMPO] buttons can change the tempo quickly.
3. Press the [TEMPO+] and [TEMPO-] buttons simultaneously to restore the default tempo setting.

Chord Fingering

1. Press the [A.B.C] button, "A.B.C" appears on the left side of the display. Now, the keyboard is divided two parts. The 19 keys on the left of the keyboard are called accompaniment keys. The accompaniment keys you pressed determine the type of chords that you played.
2. Press the accompaniment keys, the corresponding chord will display on LCD.



Single Finger

Single finger type not only can detect single finger but also can detect multi finger. And the single finger makes it easily to play chords through only one, two or three keys. Including major, minor, seventh, and minor seventh chord. Refer to relevant picture on the right for details.

| | | |
|-----|--|--|
| C | | * Major Triad Only press the root note on the keyboard. |
| Cm | | * Minor Triad Press the root note and the nearest left black key simultaneously. |
| C7 | | * Seventh chord Press the root note and the nearest left white key simultaneously. |
| Cm7 | | * Minor seventh chord Press the root note and the nearest left white and black keys simultaneously. |

Multi Finger

Multi finger type only can recognize those chords have listed in the chord list, and also can be found in the dictionary function.

| | | | | | |
|----------------------------|--------------------------|--|----------------------------|--------------------------|----------------------------|
| 0 C | 1 C ₆ | 2 C _{M7} | 3 C _{M7} (#11) | 4 C _{M7} (9) | 5 C _{M7} (9) |
| 6 C ₆ (9) | 7 C ₆ UG | 8 C _m | 9 C _m (#11) | 10 C _{m7} | 11 C _{m7} (b5) |
| 12 C _{dim} (9) | 13 C ₇ (9) | 14 C ₇ (#11) | 15 C ₇ (b9) | 16 C ₇ (9) | 17 C ₇ dim |
| 18 C _{dim} 7 | 19 C ₇ | 20 C ₇ UG | 21 C ₇ (b9) | 22 C ₇ (9) | 23 C ₇ (#11) |
| 24 C ₇ (13) | 25 C ₇ (9) | 26 C ₇ (b13) | 27 C ₇ (#9) | 28 C ₇ UG | 29 C ₇ UG |
| 30 C _{sub.4} | 31 C ₁₊₂₊₅ | Notes enclosed in parentheses are optional, the chords could be recognized without them. | | | |

 
 
Playing the Styles

One Touch Setting

One Touch Setting is a convenient function that allows you to automatically play a preset voice to match a selected style you have changed.

Follow these steps to activate One-Touch Setting.

1. Press the [O.T.S.] button to turn on the One Touch Setting for current style. "O.T.S." appears.
2. Press one of the ONE TOUCH SETTING buttons [M1]-[M4]. Voice match the selected style can be instantly recalled with just a single button press.
3. Press the [O.T.S.] button again to quit One Touch Setting mode, "O.T.S." disappears.

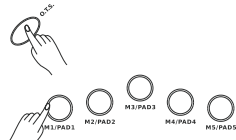

Note:

A.B.C. is automatically turned on in O.T.S. mode.

When the style is changed, the matched voice will be changed automatically in O.T.S. mode.

Press the [MEMORY/PERC.] button to switch the buttons [M1] - [M5] function between memory function to percussion function. The default function is memory when power is turned on.



Memory

 
 
 
There are 5 memories (M1-M5).

1. While holding the [STORE] button, press one of the MEMORY buttons: [M1] - [M5] to register the panel settings. The new settings will replace the previous memory data. The settings include the number of voice, the number of style, tempo, beat value, sustain effect, etc.

2. Press one of the MEMORY buttons: [M1] - [M5] to recall the panel settings.

Note:

The stored settings can not be recalled when the One Touch Setting function is on. The stored settings will be returned to the default settings after you turned off the power.




Percussion

There are 5 percussion pads : Bass drum, snare drum, hi-hat open, hi-hat close, and high tom-tom.

1. Press the [MEMORY/PERC.] button to enter the percussion function. The LCD will display PERC.


 
2. Press the [PAD] buttons to play the percussion sounds.



Chord Dictionary

If you know the name of a chord but don't know how to play it, you can use the Chord Dictionary function.

  1. Press the [CHORD DICT.] button to enter this mode, the LCD displays "d 1E7", the Chord Type and Chord Notes.
2. In this mode, the key above #G3 are used to assign the Chord Type, the keys above C5 are used to assign the Chord Root. When the Chord Type and Chord Root are confirmed, the LCD will display the Chord and its keyboard position.
3. Play the chords on the keyboard according to the display. If you press the correct notes, you will hear a prompt applause sound.

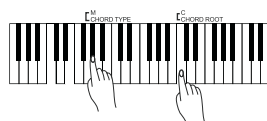

Metronome

 
 
Turning on the Metronome

1. Press the [METRO] button to turn on the metronome.
2. Press the [METRO] button again to turn off the metronome.
3. Press the [TEMPO+] / [TEMPO-] button to change the tempo of the metronome.



Selecting the Beat


1. Press the [FUNCTION] button until "bE7 4" displays.
2. Press the [+] or [-] button to change the beat value: 0 2 3 4 5 6 7 8 9. The default value is 4.

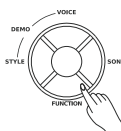

The instrument features 80 songs (Refer to **Song List**). Each song can be practiced in LESSON mode.

Listening to the Songs

 
1. Press the [SONG] button to enter the song mode. It will play all songs circularly. The display indicates "SONG" and the number of the current song. Press the [SONG] button again, it will stop the song and exit the song mode.
2. In song mode, use the number keys, [+] or [-] button to select a song.
3. Once you start playing a song by pressing [START/STOP] button, it will play current song repeatedly. Press the [START/STOP] button again, it will stop the current song but not exit the song mode.
4. Use the [TEMPO+] or [TEMPO-] button to change the tempo of the current song.
5. When the song is stopped, press [STYLE], [VOICE], [DEMO] to exit the song mode.

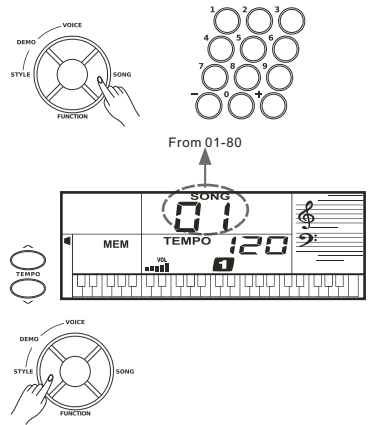

Lesson Mode

In the instrument, there are 3 different ways to practice the songs: time value training, note correction training, melody off. And the keyboard has a grading system to help you to know well about your progress.

 1. In Song mode, press the [LESSON] button to enter the lesson mode or switch the lesson mode.
2. Press the [START/STOP] button to start learning. The LCD will display the note need to be played.
3. Press the [START/STOP] button again to stop learning.
4. There are 3 lesson modes and a grading system.

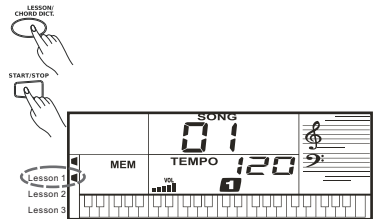

Lesson 1: the keyboard only grades the time value of the playing, don't care the correction of the note.

Lesson 2: the keyboard only grades your practice by the note; don't care about the correctness of the timing. Only when you play the correct note, the song will continue to the next note.

Lesson 3: the keyboard will score your practice by the correction of the time value and note.

Grade: In lesson mode, when you finished learning the current the song, the keyboard will play the prompt sound to tell you the level you get.

Level 1: Ok

Level 2: Good

Level 3: Very Good

Level 4: Excellent

After grading, the song will be playing again, you can learn it again.

 
 
 
Recording and Playback

You can record your performance (up to 200 notes), and the accompaniment.

1. Press the [REC] button, the "REC" appears, the beat flashes.
2. Play the notes you want to record or press the [START/STOP] button to start recording. If you want to record your performance accompanied with the style, please turn on the A.B.C, and play the chords on the left of the keyboard.
3. Press the [REC] button again to stop recording. The "REC" disappears.
4. Press the [PLAY] button to play the notes you recorded. The "PLAY" appears.
5. Press the [PLAY] button again to stop it. The "PLAY" disappears.

Note:

If you turned off the keyboard, the data you have recorded will be lost.



By using the MIDI functions you can expand your musical possibilities. This section explains what MIDI is, and what it can do, as well as how you can use MIDI on your instrument.

What's MIDI?

MIDI (short for Musical Instrument Digital Interface) allows a wide variety of electronic musical instruments, computers and other related devices to connect and communicate with one another. MIDI carries event messages that specify notation, pitch and velocity, control signals for parameters such as volume, vibrato, audio panning, and program change information to change the voice selections.

The instrument can output the real-time playback information via MIDI and control external MIDI devices. The instrument can also accept incoming MIDI messages and generate sound accordingly.

MIDI Terminals

 
MIDI Connection

The electronic keyboard is equipped with a standard USB interface instead of conventional MIDI IN and MIDI OUT connectors. The USB interface allows the keyboard to be connected to a computer without the need to separately purchase a MIDI interface for the computer. Most computers will automatically recognize the keyboard as a MIDI interface, allowing MIDI messages to be received from, or sent to, music programs running on the computer.

To connect the keyboard to a computer you will need a standard USB A-B cable (not supplied) and suitable software such as a music sequencing program (not supplied).

Note:

Activate the computer from a sleep/suspended/standby mode before connecting the USB cable. Connect the USB cable to the instrument and a computer before turning the power of the instrument on.

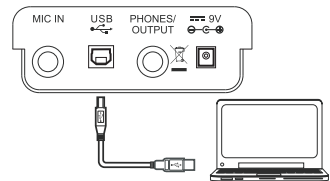

Troubleshooting

| Problem | Possible Cause and Solution |
|---|--|
| The speakers produce a "pop" sound whenever the power is turned ON or OFF. | This is normal and is no cause for alarm. |
| No sound results when the keyboard is played. | Make sure the master volume is set at appropriate levels. |
| When using a mobile phone, noise is produced. | Using a mobile phone in close proximity to the instrument may produce interference. To prevent this, turn off the mobile phone or use it further away from the instrument. |
| The auto accompaniment does not play back even Sync is in standby condition and a key is pressed. | You may be trying to start accompaniment by playing a key in the right-hand range of the keyboard. To start the accompaniment with Sync Start, make sure to play a key in the left-hand range of the keyboard. |

Specifications

Keyboard

49

Display

Multi-functional LCD

Polyphony

32

Voice

132, including 4 drum kits

Style

100

Song

80

Demo

80

Tempo

40-240

Registration Memory

5

Control button

Power on/off switch, Master Volume+/-, ACC. Volume+/-, Tempo+/-, A.B.C, Function, Style, Voice, Song, Lesson, Store, M1-M5, O.T.S., Modulation, Memory/Perc., +/-, Piano, Metro, Sustain, DSP.

Accompaniment Control

Start/Stop, Sync/Fill.

Record Function

Record, Play.

Connectors

DC IN, Headphones / Output, USB, MIC IN.

Power Supply

DC 9V

Speaker

2W + 2W

Dimensions

667 (W)X245 (D)X82 (H) mm

Weight

2.2KG (without batteries)

* All specifications and appearances are subject to change without notice.

Voice List

| No. | Name | abbr. | | | | | | |
|------------------------|-------------------------|---------------|-----------------------|------------------------|----------------|-------------------|--------------------|-------------|
| PIANO | | | 44 | Contrabass | Contrabass | 88 | Lead 8 (Bass&Lead) | Bass&Lead |
| 1 | Acoustic Grand Piano | Grand Pno | 45 | Tremolo Strings | Tremolo Strs | 89 | Pad 1 (New Age) | New Age |
| 2 | Bright Acoustic Piano | Bright Pno | 46 | Pizzicato Strings | Pizzicato Strs | 90 | Pad 2 (Warm) | Warm |
| 3 | Electric Grand Piano | E.Grand Pno | 47 | Orchestra Harp | Orchestra Harp | 91 | Pad 3 (Polysynth) | Polysynth |
| 4 | Honky-Tonk Piano | Honky-Tonk | 48 | Timpani | Timpani | 92 | Pad 4 (Choir) | Choir |
| 5 | Rhodes Piano | Rhodes Pno | ENSEMBLE | | | 93 | Pad 5 (Bowed) | Bowed |
| 6 | Chorus Piano | Chorus Pno | 49 | Strings Ensemble 1 | Strings Ens 1 | 94 | Pad 6 (Metallic) | Metallic |
| 7 | Harpichord | Harpichord | 50 | Strings Ensemble 2 | Strings Ens 2 | 95 | Pad 7 (Halo) | Halo |
| 8 | Clavichord | Clavi | 51 | Synth Strings 1 | Synth Strs 1 | 96 | Pad 8 (Sweep) | Sweep |
| MALLET | | | 52 | Synth Strings 2 | Synth Strs 2 | SYNTH SFX | | |
| 9 | Celesta | Celesta | 53 | Choir Aahs | Choir Aahs | 97 | FX 1 (Rain) | Rain |
| 10 | Glockenspiel | Glockenspiel | 54 | Voice Oohs | Voice Oohs | 98 | FX 2 (Soundtrack) | Soundtrack |
| 11 | Music Box | Music Box | 55 | Synth Voice | Synth Voice | 99 | FX 3 (Crystal) | Crystal |
| 12 | Vibraphone | Vibraphone | 56 | Orchestra Hit | Orchestra Hit | 100 | FX 4 (Atmosphere) | Atmosphere |
| 13 | Marimba | Marimba | BRASS | | | 101 | FX 5 (Brightness) | Brightness |
| 14 | Xylophone | Xylophone | 57 | Trumpet | Trumpet | 102 | FX 6 (Goblins) | Goblins |
| 15 | Tubular Bells | Tubular Bells | 58 | Trombone | Trombone | 103 | FX 7 (Echoes) | Echoes |
| 16 | Dulcimer | Dulcimer | 59 | Tuba | Tuba | 104 | FX 8 (Sci-Fi) | Sci-Fi |
| ORGAN | | | 60 | Muted Trumpet | Muted Trumpet | ETHNIC | | |
| 17 | Hammond Organ | Hammond Org | 61 | French Horn | French Horn | 105 | Sitar | Sitar |
| 18 | Percussive Organ | Perc Org | 62 | Brass Section | Brass Section | 106 | Banjo | Banjo |
| 19 | Rock Organ | Rock Org | 63 | Synth Brass 1 | Synth Brass 1 | 107 | Shamisen | Shamisen |
| 20 | Church Organ | Church Org | 64 | Synth Brass 2 | Synth Brass 2 | 108 | Koto | Koto |
| 21 | Reed Organ | Reed Org | REED | | | 109 | Kalimba | Kalimba |
| 22 | Accordion | Accordion | 65 | Soprano Sax | Soprano Sax | 110 | Bagpipe | Bagpipe |
| 23 | Harmonica | Harmonica | 66 | Alto Sax | Alto Sax | 111 | Fiddle | Fiddle |
| 24 | Tango Accordion | Tango Acd | 67 | Tenor Sax | Tenor Sax | 112 | Shanai | Shanai |
| GUITAR&BASS | | | 68 | Baritone Sax | Baritone Sax | PERCUSSIVE | | |
| 25 | Acoustic Guitar (Nylon) | Nylon Gtr | 69 | Oboe | Oboe | 113 | Tinkle Bell | Tinkle Bell |
| 26 | Acoustic Guitar (Steel) | Steel Gtr | 70 | English Horn | English Horn | 114 | Agogo | Agogo |
| 27 | Electric Guitar (Jazz) | Jazz Gtr | 71 | Bassoon | Bassoon | 115 | Steel Drums | Steel Drums |
| 28 | Electric Guitar (Clean) | Clean Gtr | 72 | Clarinet | Clarinet | 116 | Woodblock | Woodblock |
| 29 | Electric Guitar (Muted) | Muted Gtr | PIPE | | | 117 | Taiko Drum | Taiko Drum |
| 30 | Overdriven Guitar | Overdriven | 73 | Piccolo | Piccolo | 118 | Melodic Tom | Melodic Tom |
| 31 | Distortion Guitar | Distortion | 74 | Flute | Flute | 119 | Synth Drum | Synth Drum |
| 32 | Guitar Harmonics | Harmonics | 75 | Recorder | Recorder | EFFECTS | | |
| 33 | Acoustic Bass | Acoustic Bass | 76 | Pan Flute | Pan Flute | 120 | Effects 1 | Effects 1 |
| 34 | Electric Bass (Finger) | Finger Bass | 77 | Bottle Blow | Bottle Blow | 121 | Effects 2 | Effects 2 |
| 35 | Electric Bass (Pick) | Pick Bass | 78 | Shakuhachi | Shakuhachi | 122 | Effects 3 | Effects 3 |
| 36 | Fretless Bass | Fretless Bass | 79 | Whistle | Whistle | 123 | Effects 4 | Effects 4 |
| 37 | Slap Bass 1 | Slap Bass 1 | 80 | Ocarina | Ocarina | 124 | Effects 5 | Effects 5 |
| 38 | Slap Bass 2 | Slap Bass 2 | LEAD & PAD | | | 125 | Effects 6 | Effects 6 |
| 39 | Synth Bass 1 | Synth Bass 1 | 81 | Lead 1 (Square) | Square | 126 | Effects 7 | Effects 7 |
| 40 | Synth Bass 2 | Synth Bass 2 | 82 | Lead 2 (Sawtooth) | Sawtooth | 127 | Effects 8 | Effects 8 |
| STRINGS | | | 83 | Lead 3 (Calliope lead) | Calliope | 128 | Effects 9 | Effects 9 |
| 41 | Violin | Violin | 84 | Lead 4 (Chiff lead) | Chiff | DRUM | | |
| 42 | Viola | Viola | 85 | Lead 5 (Charang) | Charang | 129 | Standard Kit | Standard |
| 43 | Cello | Cello | 86 | Lead 6 (Voice) | Voice | 130 | Room Kit | Room |
| | | | 87 | Lead 7 (Fifths) | Fifths | 131 | Power Kit | Power |
| | | | | | | 132 | Electronic Kit | Electronic |

Style List

| No. | Name | abbr. |
|------------------------|-----------------|-----------------|
| BEAT & POP | | |
| 1 | 8 Beat 1 | 8 Beat 1 |
| 2 | 8 Beat 2 | 8 Beat 2 |
| 3 | 8 Beat 3 | 8 Beat 3 |
| 4 | 8 Beat 4 | 8 Beat 4 |
| 5 | 60's 8 Beat | 60's 8 Beat |
| 6 | 8 Beat Ballad | 8 Beat Ballad |
| 7 | 8 Beat Rock | 8 Beat Rock |
| 8 | 16 Beat 1 | 16 Beat 1 |
| 9 | 16 Beat 2 | 16 Beat 2 |
| 10 | 16 Beat Pop | 16 Beat Pop |
| 11 | 16 Beat Shuffle | 16 Beat Shuffle |
| 12 | Ballad 1 | Ballad 1 |
| 13 | Slow Ballad | Slow Ballad |
| 14 | 16 Beat Ballad | 16 Beat Ballad |
| 15 | Unplugged | Unplugged |
| ROCK | | |
| 16 | Rock | Rock |
| 17 | Pop Rock | Pop Rock |
| 18 | Fast Rock | Fast Rock |
| 19 | Slow Rock 1 | Slow Rock 1 |
| 20 | Slow Rock 2 | Slow Rock 2 |
| 21 | Rock & Roll | Rock & Roll |
| 22 | Heavy Metal | Heavy Metal |
| 23 | Blues Boogie | Blues Boogie |
| 24 | Blues | Blues |
| 25 | Shuffle | Shuffle |
| 26 | Blues Shuffle | Blues Shuffle |
| 27 | Rock Shuffle | Rock Shuffle |
| 28 | Charleston | Charleston |
| DANCE | | |
| 29 | Disco 1 | Disco 1 |
| 30 | Disco 2 | Disco 2 |
| 31 | Disco Funk | Disco Funk |
| 32 | Dance | Dance |
| 33 | House 1 | House 1 |
| 34 | House 2 | House 2 |
| 35 | Rap | Rap |
| 36 | Euro Beat | Euro Beat |
| 37 | Hip Hop | Hip Hop |
| 38 | Techno | Techno |
| SOUL & FUNK | | |
| 39 | Funky Pop | Funky Pop |
| 40 | Jazz Funk | Jazz Funk |
| 41 | Cool Funky | Cool Funky |
| 42 | Soul 1 | Soul 1 |
| 43 | Soul 2 | Soul 2 |
| 44 | Soul Shuffle | Soul Shuffle |
| 45 | Soul Blues | Soul Blues |
| 46 | R & B | R & B |
| 47 | 6/8 Gospel | 6/8 Gospel |
| 48 | Pop Groove | Pop Groove |
| JAZZ | | |
| 49 | Swing 1 | Swing 1 |

| | | |
|--------------------|--------------------|--------------------|
| 50 | Cool Jazz | Cool Jazz |
| 51 | Pop Swing | Pop Swing |
| 52 | Swing Fox | Swing Fox |
| 53 | Big Band | Big Band |
| 54 | Big Band Medium | Big Band Medium |
| 55 | Jazz Waltz 1 | Jazz Waltz 1 |
| 56 | Ragtime | Ragtime |
| 57 | Dixieland | Dixieland |
| 58 | Quick Step | Quick Step |
| COUNTRY | | |
| 59 | Country 1 | Country 1 |
| 60 | Country 2 | Country 2 |
| 61 | Pop Country | Pop Country |
| 62 | Country Rock | Country Rock |
| 63 | Country Folk | Country Folk |
| 64 | 3/4 Country | 3/4 Country |
| 65 | Country Waltz | Country Waltz |
| 66 | Country Shuffle | Country Shuffle |
| 67 | Country Boogie | Country Boogie |
| 68 | Country Blues | Country Blues |
| 69 | Country Quick Step | Country Quick Step |
| 70 | Bluegrass | Bluegrass |
| LATIN | | |
| 71 | Bossa Nova 1 | Bossa Nova 1 |
| 72 | Bossa Nova 2 | Bossa Nova 2 |
| 73 | Rhumba | Rhumba |
| 74 | Pop Rhumba | Pop Rhumba |
| 75 | Cha Cha | Cha Cha |
| 76 | Pop Cha Cha | Pop Cha Cha |
| 77 | Tango | Tango |
| 78 | Jazz Samba | Jazz Samba |
| 79 | Reggae | Reggae |
| 80 | Pop Reggae | Pop Reggae |
| TRADITIONAL | | |
| 81 | March 1 | March 1 |
| 82 | March 2 | March 2 |
| 83 | German March | German March |
| 84 | 6/8 March 1 | 6/8 March 1 |
| 85 | Polka | Polka |
| 86 | Pop Polka | Pop Polka |
| 87 | Waltz 1 | Waltz 1 |
| 88 | Slow Waltz | Slow Waltz |
| 89 | Vienna Waltz | Vienna Waltz |
| 90 | Musette | Musette |
| PIANO | | |
| 91 | 8 Beat | 8 Beat |
| 92 | Ballad 2 | Ballad 2 |
| 93 | Boogie | Boogie |
| 94 | Jazz | Jazz |
| 95 | Swing 2 | Swing 2 |
| 96 | Jazz Waltz 2 | Jazz Waltz 2 |
| 97 | Twist | Twist |
| 98 | March | March |
| 99 | 6/8 March 2 | 6/8 March 2 |
| 00 | Waltz 2 | Waltz 2 |

| No. | Name |
|---------------------------|----------------------------------|
| FAVORITE | |
| 1 | The Old Gray Mare |
| 2 | In The Rain |
| 3 | Jeanie With The Light Brown Hair |
| 4 | American Patrol |
| 5 | Heidenroslein |
| 6 | Music Box Dancer |
| 7 | Rondo |
| 8 | The Melody Of Yesterday |
| 9 | It's Been A Long, Long Time |
| 10 | Chant Sans Paroles |
| 11 | Water Music |
| 12 | The Entertainer |
| 13 | О г о н е к |
| 14 | Five Hundred Miles |
| 15 | Old Folks At Home |
| 16 | O Sole Mio |
| 17 | Sonata |
| 18 | Allegro In bB |
| 19 | The Red Sarafan |
| 20 | Dance De Mirlitons |
| 21 | Nocturne |
| 22 | Air On The G String |
| 23 | Canon |
| 24 | Minuet In G |
| 25 | Beautiful Dreamer |
| FOLK & COUNTRY | |
| 26 | Danny Boy |
| 27 | My Bonnie |
| 28 | Skip To My Lou |
| 29 | Katyusha |
| 30 | Red River Valley |
| 31 | The Sideway |
| 32 | Dance Of Russia |
| 33 | House Of Rising Sun |
| 34 | Starlight Waltz |
| 35 | Home On The Range |
| 36 | The Blue Bells Of Scotland |
| 37 | Annie Laurie |
| 38 | Trumpet |
| 39 | Country |
| 40 | Jambalaya |

| | |
|--------------------------|-------------------------------|
| 41 | Bridge |
| 42 | Sippin' Cider Through A Straw |
| JAZZ & FUSION | |
| 43 | June Samba |
| 44 | Guitar & Saxphone |
| 45 | The Hip Hop's Night |
| 46 | Blue Lunch |
| 47 | Cobweb |
| 48 | Wine |
| 49 | Jazz Old Man |
| 50 | Carlos |
| CHRISTMAS | |
| 51 | Ave Maria |
| 52 | Joy To The World |
| 53 | Santa Claus Is Coming To Town |
| 54 | Silent Night |
| 55 | Amazing Grace |
| 56 | Oh! Susanna |
| 57 | Battle Hymn Of The Republic |
| 58 | Carry Me Back To Old Virginny |
| 59 | Camptown Races |
| 60 | Dark Eyes |
| PIANO | |
| 61 | Fur Elise |
| 62 | Bagatelle No. 3 |
| 63 | Musette in D |
| 64 | Prelude in G |
| 65 | Turkish Rondo |
| 66 | Four Little Swans |
| 67 | Did You Ever See A Lassie |
| 68 | Spring |
| 69 | Impromptu |
| 70 | Gavotte |
| 71 | Nocturne |
| 72 | Pizzicato Polka |
| 73 | Moment Musical |
| 74 | The Rag-Time Dance |
| 75 | All Kind Of My Everything |
| 76 | Valse No. 6 "Petit Chien" |
| 77 | Rondeau |
| 78 | The Chrysanthemum |
| 79 | Invention A 2 Voix |
| 80 | Jesus, Saviour, Pilot Me |

Chord List

| No. | Chord Name/[Abbreviation] | Normal Voicing | Chord (C) | Display |
|-----|----------------------------------|----------------|-----------|---------|
| 0 | Major [M] | 1-3-5 | C | C |
| 1 | Major sixth [6] | 1-(3)-5-6 | C6 | C6 |
| 2 | Major seventh [M7] | 1-3-(5)-7 | CM7 | CM7 |
| 3 | Major add ninth [Madd9] | 1-2-3-5 | Cmadd9 | CM9 |
| 4 | Augmented [aug] | 1-3-#5 | Caug | Caug |
| 5 | Minor [m] | 1-b3-5 | Cm | Cm |
| 6 | Minor sixth [m6] | 1-b3-5-6 | Cm6 | Cm6 |
| 7 | Minor seventh [m7] | 1-b3-(5)-b7 | Cm7 | Cm7 |
| 8 | Minor major ninth [mM7] | 1-b3-(5)-7 | CmM7 | CmM7 |
| 9 | Diminished [dim] | 1-b3-b5 | Cdim | Cdim |
| 10 | Diminished seventh [dim7] | 1-b3-b5-6 | Cdim7 | Cdim7 |
| 11 | Seventh [7] | 1-3-(5)-b7 | C7 | C7 |
| 12 | Seventh suspended fourth [7sus4] | 1-4-5-b7 | C7sus4 | C7sus4 |
| 13 | Suspended fourth [sus4] | 1-4-5 | Csus4 | Csus4 |

MIDI Implementation Chart

| Function | | Transmitted | Recognized | Remarks |
|------------------|--|---|---|---|
| Basic Channel | Default Changed | 1ch x | 1-16ch x | |
| Mode | Default Messages Altered | x x ***** | 3 3 x | |
| Note Number | True voice | 0—127 ***** | 0—127 0—127 | |
| Velocity | Note on Note off | ○ 9nH,V=64 x(9nH,V=0) | ○ 9nH,V=1-127 x(9nH,V=0; 8nH,V=0-127) | |
| After Touch | Keys Chs | x x | x x | |
| Pitch Bend | | x | ○ | |
| Control Change | 0 1 5 6 7 10 11 64 65 66 67 80 81 91 93 120 121 123 | x x x x x x x x x x x x x x x x x | ○ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○ | Bank Select Modulation Portamento Time Data Entry Volume Pan Expression Sustain Pedal Portamento ON/OFF Sostenuto Pedal Soft Pedal Reverb Program Chorus Program Reverb Level Chorus Level All Sound Off Reset All Controllers All Notes Off |
| Program Change | :true | ○ ***** | ○ 0—127 | |
| System | Exclusive | x | x | |
| System Common | :Song Position :Song Select :Tune | x x x | x x x | |
| System Real Time | :Clock :Commands | x x | x x | |
| Aux Messages | :Local ON/OFF :All Notes Off :Active Sense :Reset | x x x x | x ○ ○ ○ | |
| Note: | | | | |

- Mode 1: OMNI ON, POLY
- Mode 2: OMNI ON, MONO

- Mode 3: OMNI OFF, POLY
- Mode 4: OMNI OFF, MONO

- : YES
- ×: NO

