

NUX

NMP-4

Bluetooth Footswitch Pedal
蓝牙踏板
Owner's Manual
使用手册

CE mark for European Harmonized Standards

CE Mark which is attached to our company's products of Battery mains the product is in fully conformity with the harmonized standard(s) EN 61000-6-3:2007+A1:2011 & EN 61000-6-1:2007 Under the Council Directive 2004/108/EC on Electromagnetic Compatibility.

©2017 Cherub Technology-All rights reserved. No part of this publication may be reproduced in any form without prior written permission of Cherub Technology.



www.nuxefx.com

Made in China



FOR *Stageman AC-50* ACOUSTIC INSTRUMENT AMPLIFIER

请注意！重要安全说明。
在连接使用前，阅读以下说明。

警告: 为减少火灾或触电的危险，请勿将本设备置于雨中或潮湿的地方。

注意: 为避免火灾或触电等危险，请勿擅自拆卸本产品。维修本产品内部部件对于非专业人员来说较为困难，若有损坏请交给专业维修人员处理。

注意: 本设备已经过测试，证明符合FCC规则第15部分的B级数字设备的限制规定。操作应符合以下两个条件：

(1) 本设备不会产生有害干扰，且 (2) 本设备必须接受任何干扰，包括可能会导致非正常操作的干扰。

请遵守所有的指示和注意所有警告并保留这些说明！

目录

 
介绍.....	01
电池安装与低电量提示.....	02
USB供电.....	03
启动与连接音箱.....	04
启用LOOPER.....	06
启用鼓机.....	08
开/关Stageman音箱的内置效果器.....	10
通过EXP.接口连接表情踏板.....	11
技术规格.....	12

介绍

NMP-4是一款功能非常强大的踏板控制器，通过蓝牙无线连接Stageman音箱，立即可以启动LOOPER和鼓机功能，实现单人乐团！并且能够远程控制音箱内置的CHORUS与REVERB效果，无论练习还是演出都更方便！

电池安装与低电量提示

1、NMP-4可以使用2节AA电池供电，开始使用之前，请先打开底部的电池盖，按照指定的极性方向安装电池。

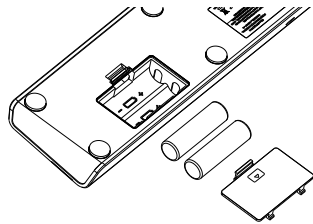


2、当电池电量低时启动本机，屏幕将显示bAt，此时请尽快更换新电池。当电池电量接近耗尽时，无论进行任何操作屏幕都将一直显示bAt并持续闪烁，此时请立即更换新电池。




USB供电

 NMP-4也可以通过USB接口进行供电，只需要将标准5V输出的USB电源连接到内置的USB接口即可自动启动本机。使用USB供电时本产品将一直保持在工作状态，无法通过侧面的拨档开关关机。

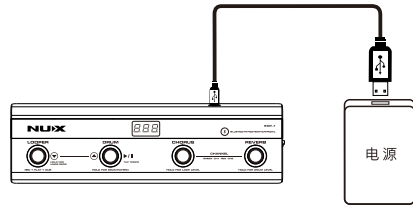


启动与连接音箱

 1、将右侧面的开关拨到ON位置即启动NMP-4。

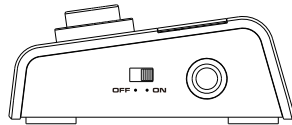

 2、开机后，本产品会自动搜索附近的Stageman音箱，搜索过程中蓝牙指示灯将会一直闪烁。当建立好连接后，蓝牙指示灯将保持常亮状态。

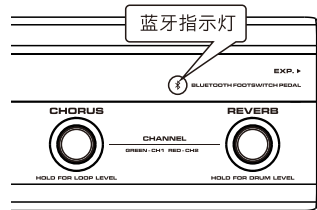

启动与连接音箱

 
本产品会自动连接所搜索到的第一个Stageman音箱，如果无法连接，请检查附近是否有处在工作状态的Stageman音箱。当有多台Stageman音箱同时存在时，请每次仅开启一台音箱和一个NMP-4踏板进行匹配，匹配完成一组后再匹配下一组，这样能更有效率地完成所有的匹配工作。

注意：

- 1、NMP-4踏板启动后如果30秒内没有与音箱匹配成功，将自动进入低功耗模式，屏幕与蓝牙灯都会自动关闭，而REVERB踩钉灯将同时亮起红色与绿色。此时操作任何一个踩钉本机将会重新启动并进入搜索状态。
- 2、NMP-4踏板通过蓝牙技术实现无线传输，如果踏板与音箱距离太远将有可能出现信号丢失或无法连接的情况。在开阔无干扰的环境下，我们推荐在8米范围内使用，如果使用环境比较复杂，请以实际有效距离为准。

启用LOOPER

- 1、当音箱与踏板匹配好后，将吉他或其他带有音频输出的乐器连接到音箱上，即可启动LOOPER进行演奏了。

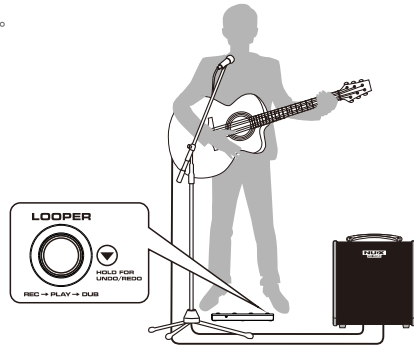


- 2、单击LOOPER踩钉，即可开始录制第一轨录音。录制完成后再次单击此踩钉，停止录制，已经录制好的内容开始播放。播放过程中单击LOOPER踩钉将开始录制下一轨。录音可以无限次叠加。
- 3、播放过程中，双击LOOPER踩钉可以暂停播放，再单击可以继续播放。
- 4、录制过程中，如果对录音不满意，可以按住LOOPER踩钉1秒取消(UNDO)最近录入的一轨录音，此时再次按住踩钉1秒可以返回(REDO)所取消的录音。

启动LOOPER

5、暂停状态下，按住LOOPER踩钉可以清除已录入的所有数据。

 
6、长按CHORUS踩钉可以进入LOOP LEVEL调整模式，屏幕将显示当前LOOPER输出音量数值，此时单击LOOPER(DOWN)、DRUM(UP)踩钉可以调整音量输出数值。调整到合适音量后，可以长按CHORUS踩钉退出或者不进行任何操作4秒后自动退出。

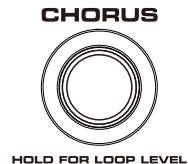

启用鼓机

1、单击DRUM踩钉启动鼓机，再次单击暂停。

 2、如果先启动LOOPER录制然后启动鼓机，那么鼓机启动后将会自动匹配LOOPER所存储的数据的节拍速度。如果先启动鼓机然后启动LOOPER，那么鼓机启动时默认节拍速度为80BPM，可以通过SMART TAP TEMPO功能设置所需的节拍速度。

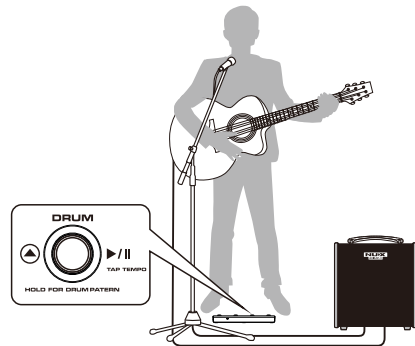

启用鼓机

3、按住DRUM踩钉1秒可以进入鼓组选择模式，单击LOOPER(DOWN)、DRUM(UP)踩钉选择不同的鼓音色。选择好鼓组后，按住DRUM踩钉1秒退出。

4、本产品内置共有20组不同的鼓组音色，其中1-15组是4/4拍，16-20组是3/4拍。鼓机默认状态自动匹配4/4拍，如果需要选择3/4拍，请在录入任何数据之前先按住DRUM踩钉1秒进入鼓组选择模式，切换到16-20组之间的任意一组，然后再开始进行录音。

5、启动鼓机后，按住REVERB踩钉1秒可以进入DRUM LEVEL调整模式，屏幕将显示当前鼓机输出音量数值，此时单击LOOPER(DOWN)、DRUM(UP)踩钉可以调整音量输出数值。调整到合适音量后，可以长按REVERB踩钉退出或者不进行任何操作4秒后自动退出。

6、鼓机启动后，1秒内如果多次单击DRUM踩钉，将会自动启动SMART TAP TEMPO功能，系统将会根据单击踩钉的时间间隔自动判定节拍速度，屏幕会实时显示TEMPO数值。1.5秒内如果没有任何操作将会自动退出。

开/关Stageman音箱的内置效果器

 
1、当NMP-4与Stageman音箱连接好后，您可以通过踏板开启/关闭音箱内置的CHORUS、REVERB效果器。

2、默认状态下，CHORUS、REVERB踩钉灯亮绿色表示CHANNEL 1效果器已经打开，灯不亮表示效果器已经关闭。同时按下CHORUS、REVERB踩钉可以切换到CHANNEL 2，此时踩钉灯亮红色表示CHANNEL 2效果器已经打开，灯不亮表示效果器已经关闭。

3、如果发现踏板无法启动或关闭音箱效果器，请先检查音箱上CHANNEL 1、CHANNEL 2对应的效果器旋钮是否已经旋转到合适位置，或者检查一下蓝牙是否已经正常连接。

通过EXP.接口连接表情踏板

1、您可以通过NMP-4右侧的EXP.接口连接一个表情踏板来同时控制LOOP和鼓组的音量。

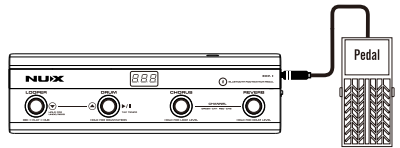

NMP-4

表情踏板

2、连接的表情踏板可以同时控制LOOP和鼓组的音量，而连接到音箱的乐器或者MIC音量不会受到影响。

技术规格

当使用两节碱性五号电池供电时

工作电流：50MA-54MA

工作功率：0.18W

连续工作时间：30小时

当使用USB 5V供电时

工作电流：40MA-43MA

工作功率：0.20W

尺寸：250mm(L)x74mm(W)x31mm(H)

重量：298g

附件：使用说明书、产品合格证。

*技术规格如有变更，恕不另行通知。

有关产品中所含有害物质的说明

本资料就本公司产品中所含的特定有害物质及其安全性予以说明。

本资料适用于2007年3月1日以后本公司所制造的产品。

环保使用期限



此标志适用于在中国国内销售的电子信息产品，表示环保使用期限的年数。所谓环保使用期限是指在制造日起的规定的期限内，产品中所含的有害物质不致引起环境污染，不会对人身、财产造成严重的不良影响。环保使用期限仅在遵照产品使用说明，正确使用产品的条件下才有效。不当的使用，将会导致有害物质泄漏的危险。

产品中有毒有害物质或元素的名称及含量

部件名称	有害有毒物质或元素					
	铅(Pb)	汞(Hg)	镉(Cd)	六价铬(Cr(VI))	多溴联苯(PBB)	多溴二苯醚(PBDE)
外壳(壳体)	×	○	○	○	○	○
电子部件(印刷电路板等)	×	○	×	○	○	○
附件(电源线、交流适配器等)	×	○	○	○	○	○

○：表示该有害有毒物质在该部件所有均质材料中的含量均在SJ/T11363-2006标准规范的限量要求以下。

×：表示该有害有毒物质至少在该部件的某一均质材料中的含量超出SJ/T11363-2006标准规定的限量要求。

因根据现有的技术水平，还没有什么物质能够代替它。

质量承诺

亲爱的 **NUX** 用户，在您使用本产品时，请仔细阅读产品说明书，当您有疑问和困难时，请拨打售后服务热线：400-990-9866

■ 一周内出现质量问题可退货退款

■ 一年内出现质量问题可免费维修

■ 一月内出现质量问题可调换

■ 终身享有咨询和维修服务

* 请向销售商索取有效购买凭证并予以保存。

换修政策

一、包换政策：

1. 消费者自购机之日起1个月之内，在正常使用情况下，出现非人为的产品性能故障，且产品外观及包装保持完好的可向所购机的经销商换机。
2. 消费者在换机时应出示由经销商开出的购机收据及保修卡，否则经销商可以不予更换。

二、保修政策：

产品在购买之日起1年内，可免费享有维修服务；对于超过1年的产品及人为或不可抗力因素造成损坏的产品，我司可提供有偿维修服务。

制造商

深圳市蔚科电子科技开发有限公司

制造商地址

深圳市南山区蛇口兴华路6号南海意库1栋507室

电话：0755-2686 9866 网址：www.nuxefx.com

生产商

珠海市蔚科科技开发有限公司

生产商地址

珠海市高新区唐家湾镇科技九路10号

电话：0756-3689 866

执行标准：Q/WKDZ 001-2017

售后服务地址

广东省珠海市高新区唐家湾镇科技九路10号

珠海市蔚科科技开发有限公司 售后服务部

邮编：519085



中国制造

WARNING

To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.

CAUTION

This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.



The lightning symbol within a triangle means, “Electrical caution!” It indicates the presence of information about operating voltage and potential risks of electrical shock.



The exclamation point within a triangle means, “Caution!” Please read the information next to all caution signs.

Contents


Introduction	01
Battery Installation&Low Battery Warning	02
Power on By External USB Power Supply.....	03
Connect to Stageman	04
Use Loop	06
Use Drum Machine.....	08
Turn On/Off On-Board Chorus&Reverb Effects.....	10
Connect Expression Pedal to NMP-4	11
Specification.....	12

Introduction

NUX NMP-4 is a wireless controller designed for NUX STAGEMAN acoustic guitar amplifier, with it you can access to STAGEMAN's hidden features: loop & drum machine and use it as hands-free on/off switch for on-board Chorus and Reverb effects. Turn both devices on, pair them up, ready for gigging.

Battery Installation&Low Battery Warning

 1. NMP-4 requires 2 Alkaline AA batteries to operate. Please open the battery cover (located on the bottom) and insert new batteries into battery compartment by following the polarity marked and close the battery cover.

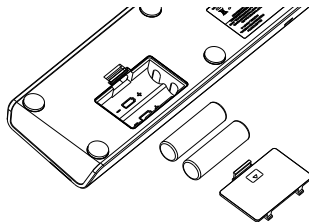


2. When the below sign shows up on its screen right after turn on, it indicates that the batteries are running low and you should get new batteries ready for replacement. When the sign below keep blinking while using, it indicates that the batteries are running out and you should change with new batteries.




Power on By External USB Power Supply

 You can also use external USB power supply to power on NMP-4. Please note that NMP-4 can only be operated with 5 Volt USB power supply and when using USB power supply the on/off switch will be disabled. The only way to turn off NMP-4 is to disconnect external USB power supply.

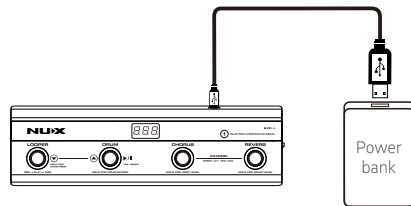


Connect to Stageman

 1. Turn on NMP-4 by push the on/off switch (located on the right side) to ON gear.

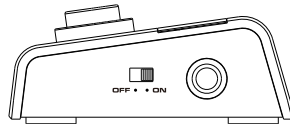

 2. NMP-4 will search for nearby STAGEMAN and pair up automatically. During the process the Bluetooth indicator will keep blinking once connection established the indicator will stop blinking and keep on.

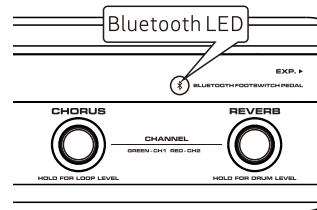

Connect to Stageman

Notice:

1. This device will automatically pair up with the first STAGEMAN detected. If not, please make sure that the STAGEMAN within its range is powered on. When you've got more than 1 set of STAGEMAN and NMP-4 waiting to be paired, please pair each set one by one.

 
2. If NMP-4 failed to pair up with STAGEMAN, it will enter energy-saving mode automatically in 30 seconds (Both the Bluetooth and screen will be turn off.) Simultaneously, red light and green light will appear on Reverb. By pressing

any button to exit energy-saving mode and force NMP-4 to search and pair up nearby STAGEMAN.

3. If the distance between NMP-4 and STAGEMAN is too far, there might be signal lost or connection failure. We highly suggest you to use both devices within 8 meters' range in normal situations. If the environment is complicated, please shorten the range accordingly.

Use Loop

1. Connect your acoustic instrument to STAGEMAN once it's paired up with NMP-4. You're ready to use Loop to coordinate your practice/performance.

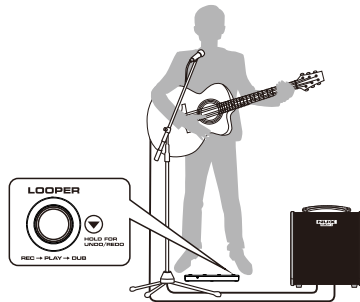

2. Press the LOOP button to record your loop phrase's first layer. Once the first layer is done, press the LOOP button to stop recording and the first layer will be play simultaneously. Press the LOOP button again to overdub.

3. When loop phrase is playing, double press the button to stop playing, press again to resume playing.

4. During overdubbing or playback, you can hold LOOP button for 1 sec to undo (cancel) the most recent overdubbing. Press and hold LOOP button for 1 sec to restore the overdubbing that you have just canceled.

Use Loop

5. You can clear all recording data by holding the LOOP button down for 1 sec while stopped.

 
6. Holding the CHORUS button down to enter loop level/volume adjust mode. Your current Loop level/volume will be shown on screen in number figures. USE LOOPER (DOWN) and DRUM(UP) to adjust loop level/volume. Holding the CHORUS button down again to exit this mode or you can choose to wait 4 seconds to exit this mode.



Use Drum Machine

1. Press DRUM button to active drum machine, press it again to pause drum machine.

2. If the loop function is active before drum machine, the drum machine will detect the speed of your loop phrase and set the tempo accordingly automatically. If the drum machine is active before loop function, the rhythm tempo will be set at 80BPM and you can change the speed with Smart TAP Tempo function.

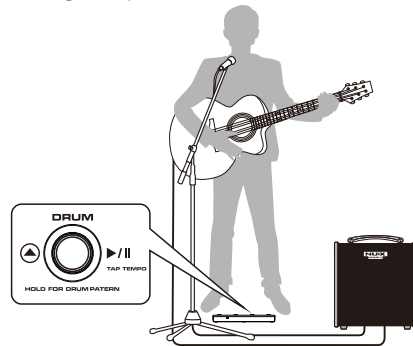

Use Drum Machine

3. Hold down the DRUM button for 1 second to enter drum pattern choosing mode, use LOOPER (DOWN) button and DRUM (UP) button to switch in between built-in drum patterns. Hold down the Drum button again for 1 second to exit this mode.

4. There are 20 groups of different drum patterns, the first 15 groups are in 4/4, the last 4 groups are in 3/4.

5. When drum machine is active, hold down REVERB button to enter drum level adjusting mode. Your current drum level/volume will be

shown on screen in number figures. USE LOOPER (DOWN) and DRUM (UP) to adjust drum level/volume. Holding the REVERB button down again to exit this mode or you can choose to wait 4 seconds to exit this mode.

6. When drum machine is active, press DRUM button more than once within 1 second, Smart Tap Tempo function will be active. You can set the tempo on your own with a few presses. The tempo will be shown on Screen. Without any operation in 1.5 second, Smart Tap Tempo function will be turn off.

Turn On/Off On-Board Chorus&Reverb Effects

1. You can use NMP-4 to turn on/off on-board Chorus & Reverb effects, once they're paired up.

 
2. The CHORUS and REVERB button on NMP-4 are defaulted set to turn on/off Chorus & Reverb effects of CHANNEL 1. Press CHORUS and REVERB button at the same time to switch to the controls of CHANNEL 2. The on/off status of each channel is indicated with different backlit. Green stands for CHANNEL 1, RED stands for CHANNEL 2. Backlit on, effects on; backlit off, effects out.

3. If you're unable to turn on/off on-board effects, please check the effect control knobs on STAGEMAN to see if they're on the right dial-ups.

Connect Expression Pedal to NMP-4

1. You can connect your expression pedal to NMP-4 via the EXP. Jack, use the expression pedal to control the volume of Loop and drum machine.

2. Your guitar volume or microphone volume won't be affected by the expression pedal.

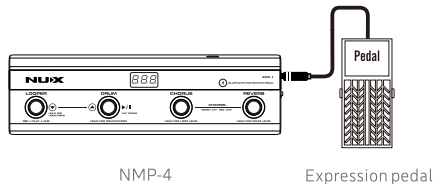

Specification

When powered by 2 x AA Alkaline battery

Working current: 50mA~ 54mA

Working Power: 0.18W

Battery life: 30 hours

When powered by 5V USB power supply

Working current: 40mA~ 43mA

Working Power: 0.20W

Dimension: 250mm (L)x74mm (W)x31mm (H)

Weight:298g

Accessories: User manual

*Specifications and appearance subject to change without notice.