


  
**soundsation**  
**CCT-20**  
 ROTATING clip-on TUNER

**I. Warning**

1. Do not disassemble or repair this tuner by yourself.
2. Do not use or store the tuner in areas with high temperature, high humidity, high dust or areas susceptible to static or electric shock.
3. Do not drop this tuner.
4. Do not use strong cleaners or solvents to clean this tuner.

**II. Part names and functions**

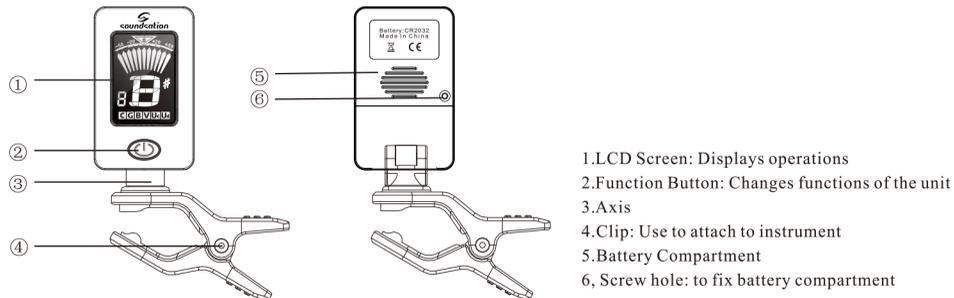

**III. Replace Battery**

- Please load in the battery (included in the package) by following steps.
1. Press the front of the battery cover and then slide back to remove cover.
  2. Put the battery into compartment with negative pole facing inward. Please insert the front of cover then push to close, can also use equipped screw to lock the cover.
  3. After inserting the battery, the unit will be on and in tuner mode.
  4. The tuner will be power off automatically after 3 minutes if no operation.

**IV. Functions and Operation**

Button	Press	Press and hold 2 seconds
	Select Tuning Items	Power ON/OFF

**V. How to Tune**

1. Get the machine ready for tuner as what you want by following ' IV. Functions and Operation ' .
  2. Clip the tuner onto your instrument. Adjust the tuner for best viewing angle.
  3. The tuner displays note name and accuracy when you play the instrument: if indicator points left, the note is flat; if indicator points right, the note is sharp; the note is in tune if indicator stays vertical and the screen in green.
- \* The tuner MUST be clipped onto your instrument to tune.

**VI. Specifications**

A4 Frequency:440Hz  
 Tuning Item: Chromatic, Guitar, Bass, Violin, Ukulele C、Ukulele D  
 Tuning Range: 0A(27.5Hz)-8C(4186.01Hz)  
 Weight: 19g  
 Dimension: 50(L)×26(W)×76(H)mm  
 Notice: Ukulele C is for standard mode (4G 3C 2E 1A)  
 Ukulele D is one note higher (4A 3D 2F# 1B)

**VII. Accessories**

Manual  
 Battery:CR2032, 1 piece  
 Screw: 2 pieces

**WARRANTY**

All SOUNDSATION products feature a limited two-year warranty. This two-year warranty is specific to the date of purchase as shown on your purchase receipt.

SOUNDSATION shall satisfy the warranty obligations by remedying any material or manufacturing faults free of charge at SOUNDSATION's discretion either by repair or by exchanging individual parts or the entire appliance.

While under warranty period, defective products may be returned to the authorized SOUNDSATION dealer together with original proof of purchase. To avoid any damages in transit, please use the original packaging if available. Freight charges have to be covered by the owner of the product.

The following cases/components are NOT covered by the above warranty:

- any accessories supplied with the product
- improper use (e.g. operating errors, mechanical damage, incorrect operating voltage)
- faults due to wear and tear
- any modification of the product effected by you or a third party

**WARNING – PLEASE READ CAREFULLY – EU and EEA**

(Norway, Iceland and Liechtenstein) only

This symbol



indicates that this product is not to be disposed of with your household waste, according to the WEEE Directive (2002/96/EC) and your national law.

This product should be handed over to a designated collection point, e.g., on an authorized one-for-one basis when you buy a new similar product or to an authorized collection site for recycling waste electrical and electronic equipment (WEEE). Improper handling of this type of waste could have a possible negative impact on the environment and human health due to potentially hazardous substances that are generally associated with EEE. At the same time, your cooperation in the correct disposal of this product will contribute to the effective usage of natural resources. For more information about where you can drop off your waste equipment for recycling, please contact your local city office, waste authority, approved WEEE scheme or your household waste disposal service.

SOUNDSATION® is a registered trademark of FRENEXPORT SpA  
[www.soundsationmusic.com](http://www.soundsationmusic.com)

