 


DIGITAL DRUM

Owner's Manual

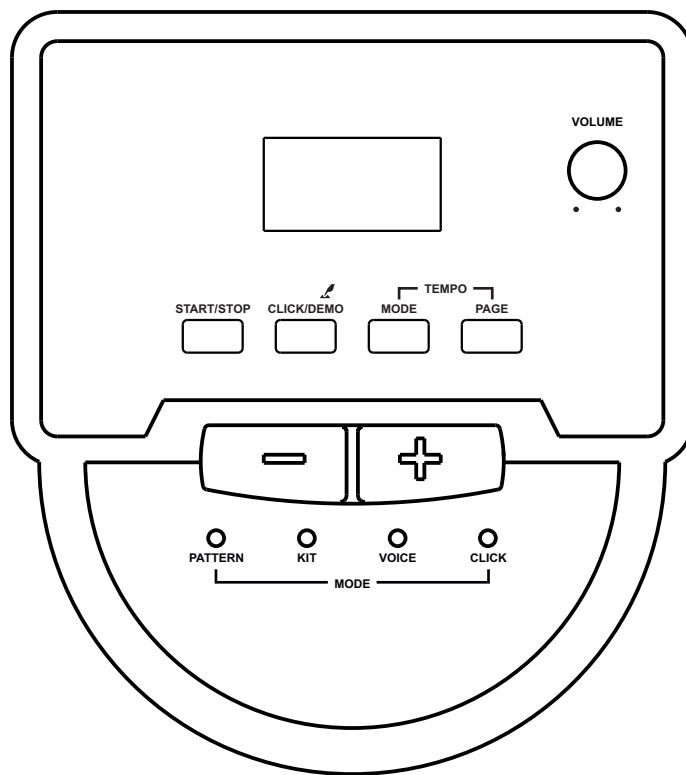

INFORMATION FOR YOUR SAFETY!

THE FCC REGULATION WARNING (for USA)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Unauthorized changes or modification to this system can void the user's authority to operate this equipment.

CAUTION

The normal function of the product may be disturbed by Strong Electro Magnetic Interference. If so, simply reset the product to resume normal operation by following the owner's manual. In case the function could not resume, please use the product in other location.

CAUTION

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

CAUTION

The normal function of the product may be disturbed by Strong Electro Magnetic Interference. If so, simply reset the product to resume normal operation by following the owner's manual. In case the function could not resume, please use the product in other location.

PRECAUTIONS

PLEASE READ CAREFULLY BEFORE PROCEEDING

Please keep this manual in a safe place for future reference.

Power Supply

Please connect the designated AC adaptor to an AC outlet of the correct voltage.

Do not connect it to an AC outlet of voltage other than that for which your instrument is intended.

Unplug the AC power adaptor when not using the instrument, or during electrical storms.

Connections

Before connecting the instrument to other devices, turn off the power to all units. This will help prevent malfunction and / or damage to other devices.

Location

Do not expose the instrument to the following conditions to avoid deformation, discoloration, or more serious damage:

- Direct sunlight
- Extreme temperature or humidity
- Excessive dusty or dirty location
- Strong vibrations or shocks
- Close to magnetic fields

Interference with other electrical devices

Radios and televisions placed nearby may experience reception interference. Operate this unit at a suitable distance from radios and televisions.

Cleaning

Clean only with a soft, dry cloth.

Do not use paint thinners, solvents, cleaning fluids, or chemical-impregnated wiping cloths.

Handling

Do not apply excessive force to the switches or controls.

Do not let paper, metallic, or other objects into the instrument. If this happens, unplug the AC adaptor from the wall outlet. Then have the instrument inspected by qualified service personnel.

Disconnect all cables before moving the instrument.

Panel Description

Front Panel	4
Rear & Side Panel	4

Setup

Connecting pads and pedals	5
----------------------------------	---

Connections

Connecting an Audio Equipment	6
Connecting an MP3/CD Player	6
Connecting a set of Headphones	6
Power Supply & Switch	6
MIDI and USB	6

MENU

menu tree	7
-----------------	---

Operation

Switch the power ON	7
Set the main volume	7
Playing the pads.....	8

Pattern

Select a pattern	9
Adjust the accompaniment volume	9
Adjust the drum volume	9

Drum Kit

Select a kit	10
Adjust the kit volume	10

Switch reverb on/off	10
----------------------------	----

Voice

Select the voice	11
Adjust the voice volume	11
Adjust the midi note	12

Tempo

Adjust the tempo	12
------------------------	----

Click

Adjust the click time signature	13
Adjust the click interval	13
Adjust the click instrument	13
Adjust the click volume	13

Restore the factory preset 14

Play the demo 14

Play the pattern 14

Play the click 14


Appendices

Specifications	15
Preset Drum Kit List	16
Drum Instrument List	16
Preset Pattern List	16
GM Backing Instrument List	17
GM Drum Kit List	19
MIDI Implementation Chart	20

Panel Description



Front Panel

 - 1 3-DIGIT LED DISPLAY**
3-digit LED and LED indicators
- 2 MASTER VOLUME KNOB**
Control the volume of phone and line out.
Turn it clockwise to increase the volume
and anticlockwise to decrease the volume.
- 3 [START/STOP] BUTTON**
Start or stop Pattern playing.
- 4 [CLICK] BUTTON**
Press [click] button to start/stop the click.
**Hold on the [click] button 2 seconds to enter
the demo mode and play the demo.**
- 5 [MODE] BUTTON**
Press [mode] button to select the mode from PATTERN,
KIT, VOICE, CLICK.
- 6 [PAGE] BUTTON**
Press [page] button to browse the menu pages
of current selected mode.
**Press both [mode] and [page] buttons,
the 3-digit LED will display the tempo page,
it will temporarily display for 3 seconds,
then press [+] or [-] to adjust the tempo.**
- 7 [+] / [-] BUTTON**
Press [+] / [-] button to adjust the parameters.

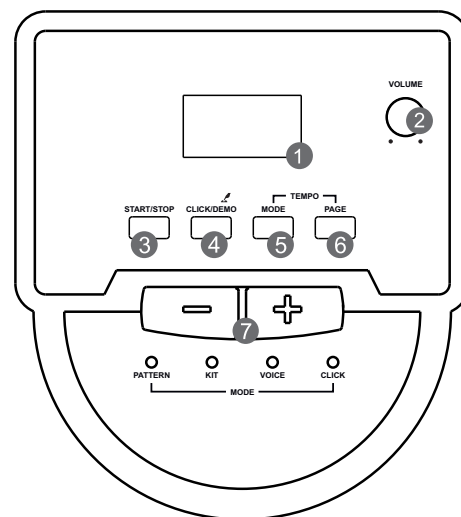

Rear & Side Panel

  - 8 USB PORT**
This port is used to connect to a
computer(MIDI In/Out via USB).
- 9 MIDI OUT JACK**
Connect with external sound module.
- 10 LINE OUTPUT JACKS (R, L/MONO)**
Stereo output connection to an audio system
or drum amplifie
- 11 AUX IN**
This stereo input jack is for an external sound
source, such as an MP3 or CD player.
- 12 PHONES JACK**
This stereo jack is used to connect headphones to the unit.
(Connect the headphones will not mute the output jack.)
- 13 POWER SWITCH**
This switch turns the power on and off .
- 14 DC IN Jack**
Connect DC power adaptor.

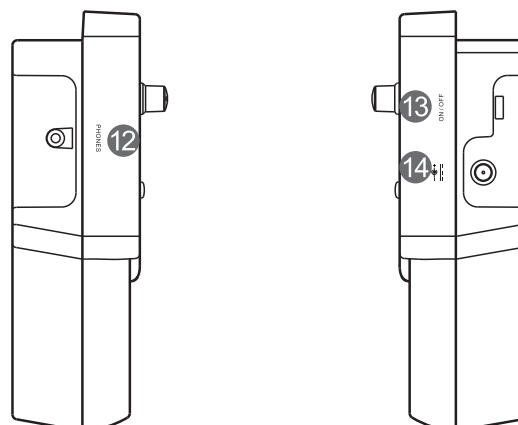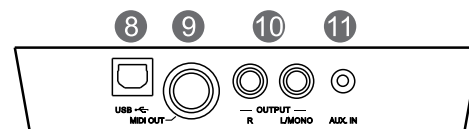

Caution!

To prevent electric shock and damage to the device, make sure the power is switched OFF on the drum and all related device before making any connection.

 
Connecting Pads and Pedals

Standard: KICK, SNARE, TOM1-3, CRASH, RIDE, HIHAT, HIHAT CONTROL PEDAL.

Using the provided cables, connect with kick, snare, tom1~tom3, ride, crash, hi-hat, hi-hat controller. Snare is stereo input, support double triggering (increase edge triggering); crash, ride support choke with stereo input; tom, kick, hi-hat are mono input, which can't response edge triggering. Hi-hat control pedal is mono input.

Note:

1. The voice of hi-hat pad hitting is controlled by hi-hat pedal. Similar to a real drum kit, the hi-hat pad functions as an 'open hi-hat' when the pedal is released. When the pedal is stepped, it functions as a 'closed hi-hat'.
2. The valid striking area of cymbal pad (ride, crash or hi-hat) is near the edge of the pad, which is different from other pads.

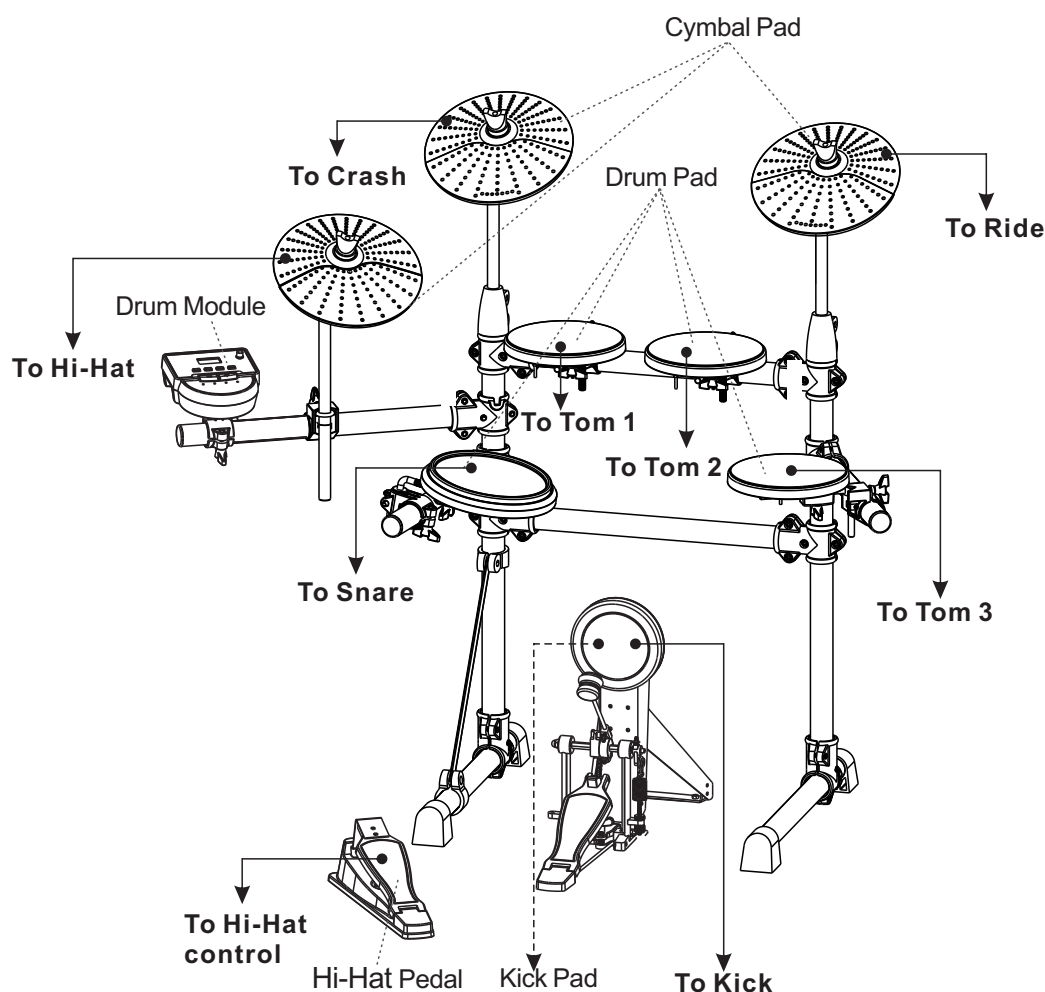

Connections

Connecting an Audio Equipment

 
When using an amplifier, connect the Output L/MONO and R jacks on the rear panel to the input of the amplifier.

Note:

For mono playback, use the L/MONO jack.

For stereo playback, connect both L/MONO and R jacks.


The line output volume is controlled by the VOLUME knob.

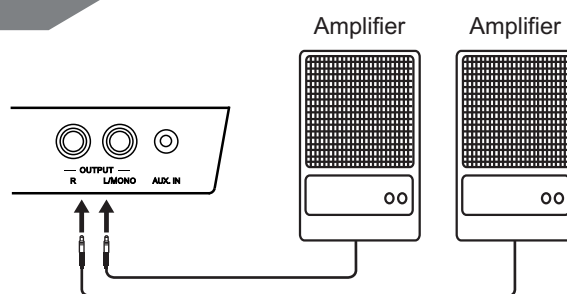

Connecting an MP3/CD Player

Connect the audio output of an MP3/CD player or other audio source to the stereo AUX IN jack on the rear panel.

 
The input signal is mixed with the drum signal, allowing you to play along.

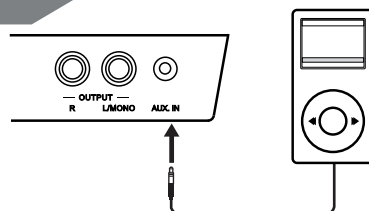

Connecting a set of headphones

An optional set of stereo headphones can be connected with the PHONES jack located on the side panel of the drum module.

 * Adjust the volume to a comfortable level.

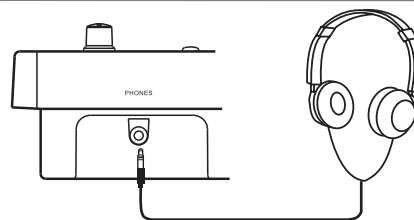


Power supply & Switch

Make sure the power is switched OFF and connect the power adaptor with the DC IN jack on the side panel.

Note:

 1. To protect the speakers, amplifier and the drum module from damage, rotate the volume knob to the minimum volume level before switching the power ON.
2. Make sure the power is switched OFF when connecting drum module with external devices.

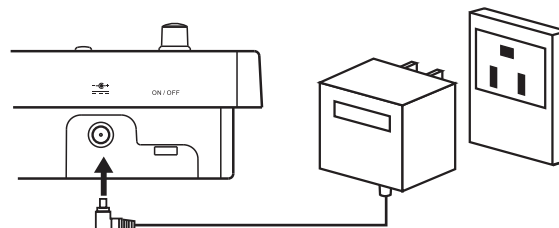

MIDI and USB

MIDI stands for Musical Instrument Digital Interface, this is a world-wide standard communication interface that enables electronic musical instruments and computers (of all brands) to communicate with each other so that MIDI command and other data can pass between them. This exchange of information makes it possible to create a system of MIDI instruments and devices that offer far greater versatility and control than is available with isolated instruments. Whether you interface with computers, sequencers, expanders or other controllers, your musical horizons will be greatly enhanced.

 
MIDI connection

MIDI OUT: This terminal transmits data from this instrument to other MIDI devices.


USB connection

The USB connector allows you to connect the module directly to your computer. It can be connected without driver installation under the Windows XP\ Vista\ Windows 7 & MAC OSX environment. The module will be recognized as 'USB Audio device' to receive and transmit MIDI messages through a single USB cable, USB is used only for MIDI messages (MIDI via USB).

Note: When the USB is connected to a computer, all MIDI messages will be received and transmitted via USB.



Menu tree

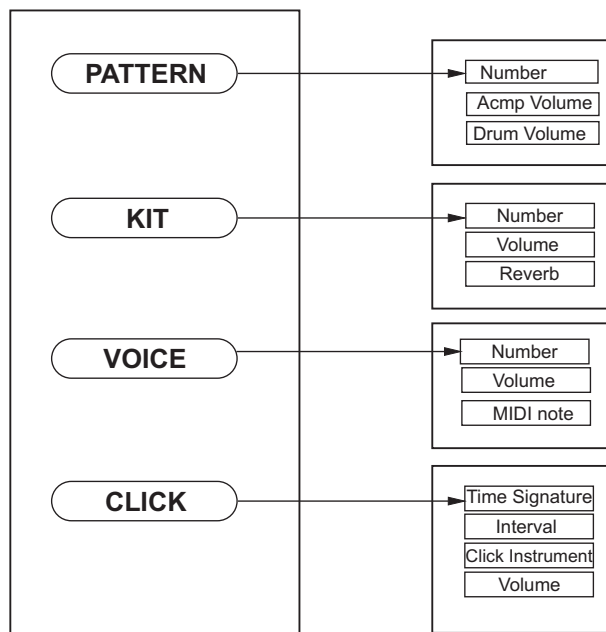 

In the main menu there are 4 menu items

- PATTERN
- DRUM KIT
- VOICE
- CLICK

Operation

Press [MODE] button to change the mode.

 
Press [PAGE] button to select the page of current mode.

Press [+] / [-] button to adjust the parameters.

Switch the power ON

After confirming all connection have been completed, rotate the volume knob to the left (minimum volume level) before switching the power on.

Set the power switch to "ON" position to switch on the power.
Display shows the kit's number and its indicator lights up.

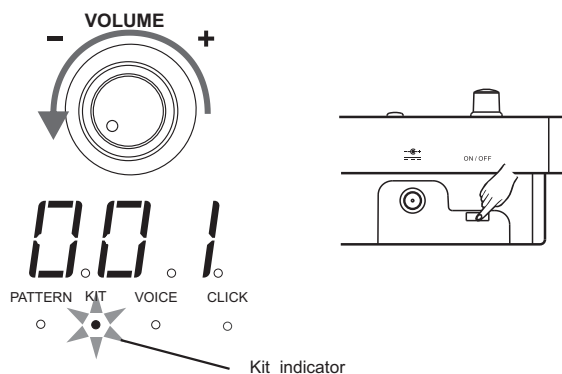

Set the main volume

While hitting a pad, gradually rotate the volume knob until a comfortable volume level is reached.



Playing the pads

Similar to an acoustic drum kit, the digital drum responds differently to various playing techniques and dynamics. All the pads are velocity sensitive. And some voices change timbre depending on the striking force.

Snare Drum Pad Head or Rim shot

The Snare drum pad detects head and rim shots (rim shots trigger the rim voice)

Cymbal Choke

Both Crash and Ride have cymbal choke.

Choking the cymbal's edge with the hand immediately after hitting the cymbal mutes the cymbal sound.

 
 
Hi-Hat

The Hi-hat sound varies depending on the position of the Hi-Hat pedal:

Open Hi-hat: Strike the Hi-hat pad without pressing the pedal.

Closed Hi-hat: Strike the Hi-hat pad with the pedal pressed completely down.

Pedal Close: Press the pedal completely down without striking the pad.

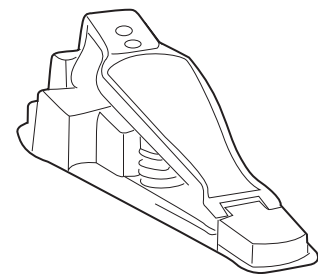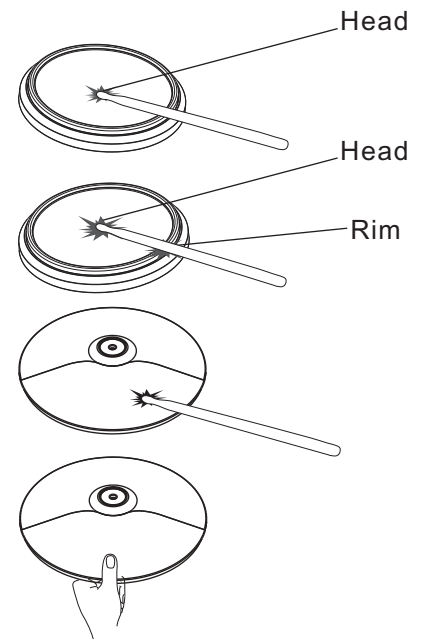

Pattern

In pattern mode, there are 3 pages:

1. Pattern number (001- 042, default 1)
2. Pattern accompaniment volume (0-32)
3. Pattern drum volume (0-32)

Select a pattern

In pattern mode, Pattern number (001-042, default 001)

1. Press the [MODE] button to select the pattern mode, the pattern LED indicator will be lighted up, the 3-digit-LED will display the pattern number (001)
2. Press [+] or [-] button to adjust the value.
Range: 001 to 042

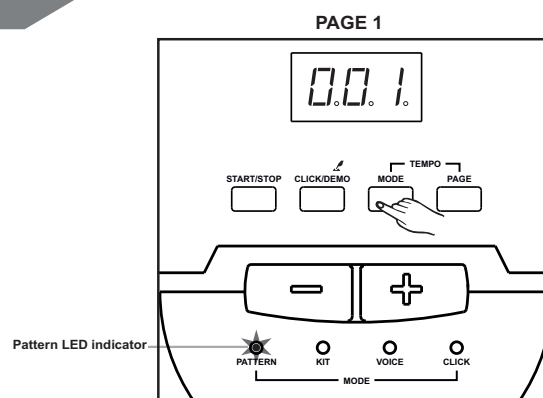 


Figure Pattern number

Adjust the accompaniment volume

In pattern mode, pattern accompaniment volume (0-32)

1. Press [MODE] button to select the pattern mode, the pattern LED indicator will be lighted up.
2. Press [PAGE] button to select the accompaniment volume page, the 3-digit-LED will display the accompaniment volume (A22).
3. Press [+] or [-] button to adjust the value.
Range: 0 to 32.

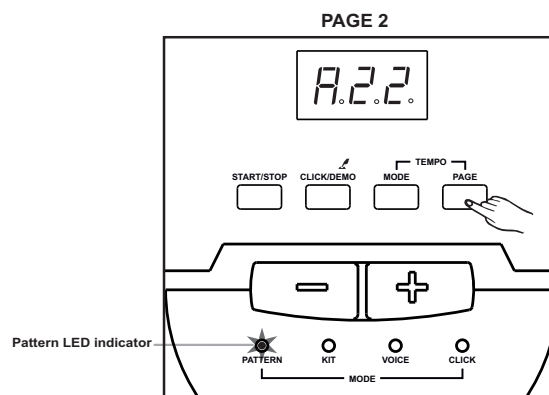 


Figure Pattern accompaniment volume

Adjust the drum volume

In pattern mode, pattern drum volume (0-32)

1. Press [MODE] button to select the pattern mode, the pattern LED indicator will be lighted up,
2. Press [PAGE] button to select the drum volume page, the 3-digit-LED will display the drum volume (d22).
3. Press [+] or [-] to adjust the value.
Range: 0 to 32

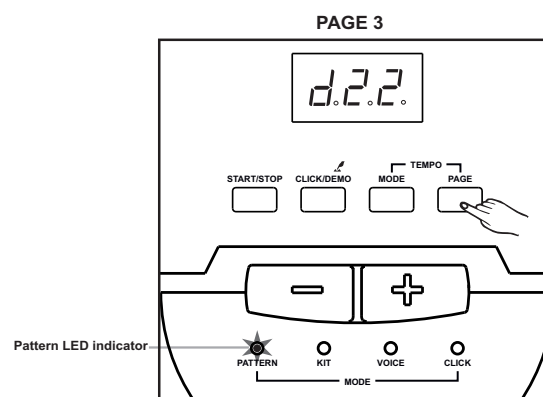 


Figure Pattern drum volume

In kit mode, there are 3 pages:

1. kit number(001-012,default 1).
2. kit volume (0-32).
3. kit reverb(on/off, default on).

Select a kit

In kit mode, kit number(001-012,default 1).

1. Press [MODE] button to select the kit mode, the kit LED indicator will be lighted up, the 3-digit-LED will display the kit number(001).
2. Press [+] or [-] to adjust the value.
Range: 001-012.

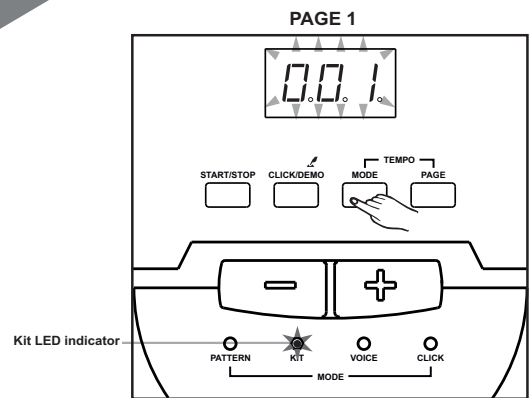 


Figure Kit number

Adjust the kit volume

In kit mode, kit volume (0-32).

1. Press the [MODE] button to select the kit mode, the kit LED indicator will be lighted.
2. Press the [PAGE] button to select the kit volume page, the 3-digit-LED will display the kit volume(L30).
3. Press [+] or [-] to adjust the value (Automatic save).
Range: 0 to 32.


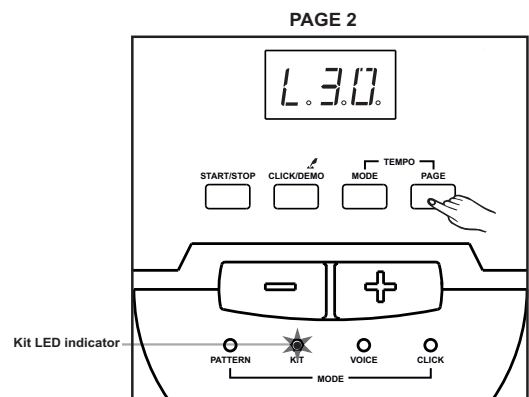 



Figure Kit volume

Switch reverb on/off

 1. Press [MODE] button to select the kit mode, the kit LED indicator will be lighted up.
2. Press the [PAGE] button to select the kit reverb page, reverb effect can be turn on or off by pressing button [+] or [-].

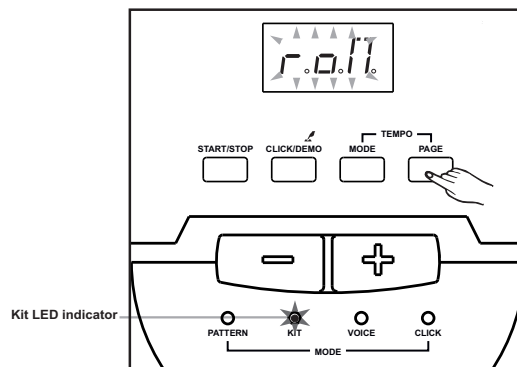

PAGE 3

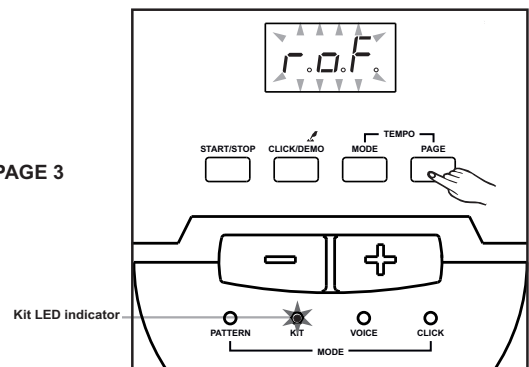 

Voice

In voice mode, there are 3pages:

1. Voice number (1-120).
2. Voice volume (0-32).
3. Midi note (0-99).

 
 
Select the voice

In voice mode, voice number (1-120).

1. Press [MODE] button to select the voice mode, the voice LED indicator will be lighted up, strike a drum pad, the 3-digit-LED will display the voice number.
2. Press [+] or [-] to adjust the value(Automatic save).
Range: 001 to 120.

NOTE:


When you select a voice for hi-hat drum, you only can select the hi-hat group voices, from group 1-group 4(Automatic save), the display is: H-1.

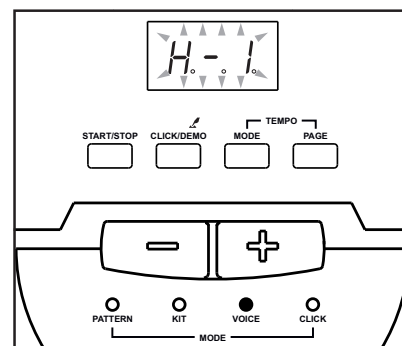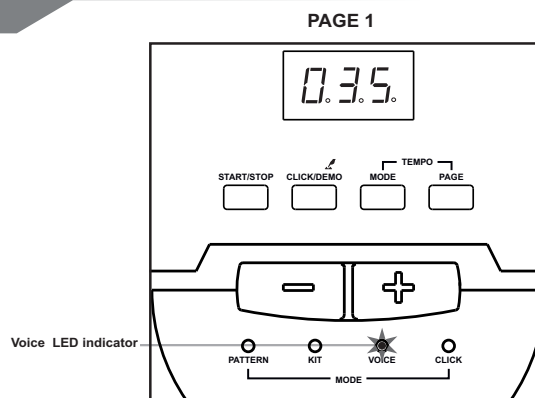

Adjust the voice volume

In voice mode, voice volume (0-32).

 1. Press [MODE] button to select the voice mode, the voice LED indicator will be lighted up.
2. Press [PAGE] button to select the voice volume page, strike a drum pad, the 3-digit-LED will display the voice volume(L30).
3. Press [+] or [-] to adjust the value(Automatic save).
Range: 0 to 32.

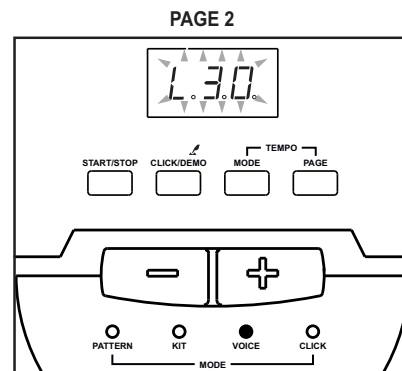


Adjust the midi note

In voice mode, midi note (0-99).

1. Press [MODE] button to select the voice mode, the voice LED indicator will be lighted up.
2. Press [PAGE] button to select the midi note page, strike a drum pad, the 3-digit-LED will display the midi note (n48).
3. Press [+] or [-] to adjust the value(Automatic save).
Range: 0 to 99.

THE DEFAULT MIDI NOTE:

NO.	NAME	NOTE
1	CRASH1	49
2	TOM 1	48
3	TOM 2	45
4	TOM 3	43
5	RIDE	51
6	KICK	36
7	SNARE	38
8	SNARE RIM	40
9	HIHAT CLOSE	42
10	HIHAT OPEN	46
11	HIHAT PEDAL	44

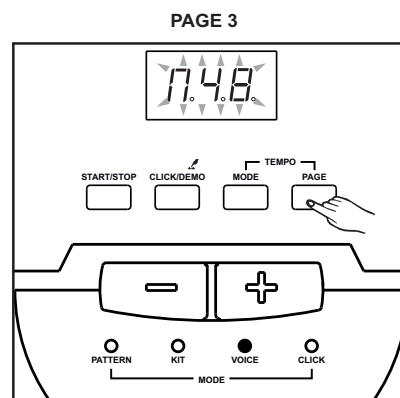 


Tempo

The tempo range is 30-280

Adjust the tempo

 1. Press both [MODE] and [PAGE] buttons, the 3-digit-LED will display the tempo page, it will temporarily display for 3 seconds.
2. Press [+] or [-] to adjust the value.

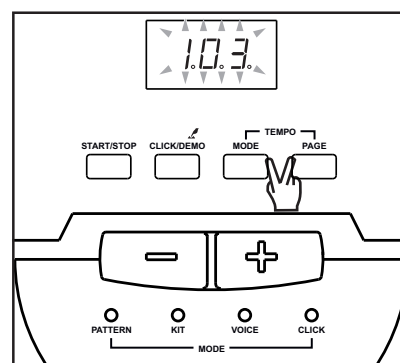

In click mode, there are 4 pages:

 
1. Time signature (1/4-7/4, 3/8, 6/8).
2. Interval (1/4, 1/8, 1/12, 1/16, 1/24, default 1/4).
3. Instrument (1-5, default 1).
4. Click volume (0-32).

Adjust the click time signature

In click mode, Time signature: (1/4-7/4, 3/8, 6/8).

1. Press [MODE] button select the click mode, the click LED indicator will be lighted up.
2. Press [PAGE] button select the click time signature page, the 3-digit-LED will display the click time signature (4-4).
3. Press [+] or [-] to adjust the value.
Range: 1/4-7/4, 3/8, 6/8.


Note: The click time signature will follow the pattern, when pattern is playing, it can not be edited.

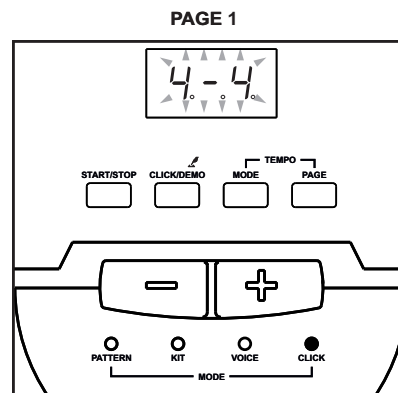

Adjust the click interval

In click mode, interval (1/4, 1/8, 1/12, 1/16, 1/24, default 1/4).

 
1. Press [MODE] button to select the click mode, the click LED indicator will be lighted up.
2. Press [PAGE] button to select the click interval page, the 3-digit-LED will display the click interval (--4).
3. Press the [+] or [-] button to adjust the value.
Range: --4 to -24.

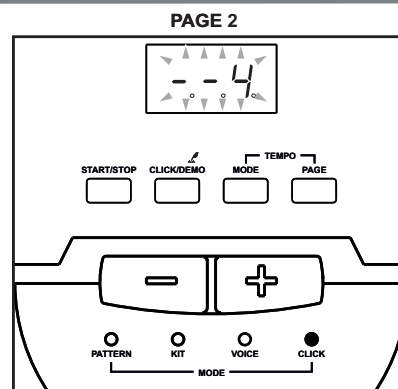

Adjust the click instrument

In click mode, instrument (1-5, default 1).

 
1. Press [MODE] button to select the click mode, the click LED indicator will be lighted up.
2. Press [PAGE] button to select the click instrument page, the 3-digit-LED will display the click instrument (CL1).
3. Press [+] or [-] to adjust the value.
Range: CL1 to CL5.

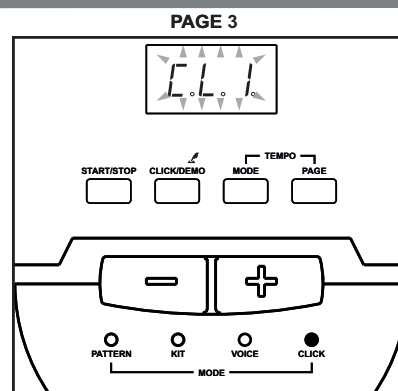

Adjust the click volume

In click mode, click volume (0-32).

 1. Press [MODE] button to select the click mode, the click LED indicator will be lighted up.
2. Press [PAGE] button to select the click volume page, the 3-digit-LED will display the click volume (L24).
3. Press [+] or [-] to adjust the value.
Range: 0 to 32

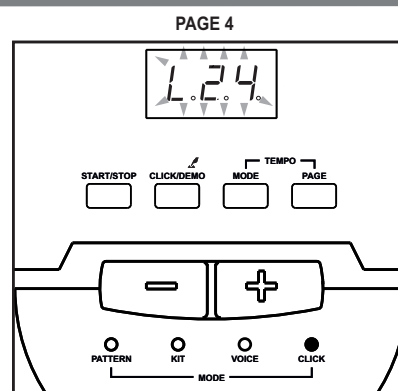

Restore the factory preset

Restoring the factory preset can be implemented by following operations:

 
Turn on the power with both [+] and [-] unreleased.

This function will replace the current settings of following parameters by their default preset values:

Kit volume, voice number, voice volume and MIDI note.

Play the demo

1. Hold on the [CLICK] button 2 seconds to enter the demo and play the demo, the 3-digit-LED will display the demo "dE".
2. Press [START/STOP] button to stop the demo playing.

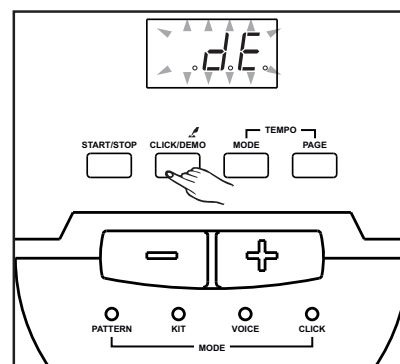

Play the pattern

1. Press [START/STOP] button play the pattern.
2. Press [START/STOP] button again to stop the pattern playing.

Play the click

1. Press the [CLICK] button to start the click, the click indicator will flash following the beat.
2. Press the [CLICK] button again to stop the click.

Specifications

Drum Pad

4 drum pads , 3 cymbal pads ,1 hi-hat control pedal , 1 kick pedal

Preset Drum kits

12 preset kits

Drum Instrument

120

Preset Pattern

42

Controls

MIDI OUT, POWER SWITCH, USB, PHONES, START/STOP,PATTERN, KIT, VOICE, CLICK, MODE, PAGE, DEMO, TEMPO, VOLUME, + / -

Hardware

8" dual zone Snare pad,
7.5" 1-zone Tom pad x 3,
10" 1-zone with choke for Crash,
10" 1-zone with choke for Ride,
10" 1-zone for Hi-hat,
Hi-hat Pedal,
Kick pad,

Display

LED display

Connections

PHONES
AUX IN
OUTPUT (R & L/MONO)
MIDI OUT
USB
ON/OFF

Power Supply

DC IN

Preset Drum KIT List

No.	Name	No.	Name
001	Acoustic 1	007	Brush
002	Standard 1	008	Electronic
003	Rock	009	808
004	Standard 2	010	house
005	Funk 1	011	Acoustic 2
006	Jazz	012	Funk 2

Drum Instrument List

No.	Name	No.	Name	No.	Name	No.	Name	No.	Name
KICK									
001	Standard Kick 1	028	Acoustic Snare Rim 1	055	808 Tom 2	HI-HAT		107	Long Guiro
002	Standard Kick 2	029	Acoustic Snare 2	056	808 Tom 3	081	Standard Hi-hat Open	108	Claves
003	Standard Kick 3	030	Acoustic Snare Rim 2	057	808 Tom 4	082	Jazz Hi-hat Open	109	High Wood Block
004	Room Kick 1	031	Funk Band Snare	058	808 Tom 5	083	Electronic Hi-hat Open	110	Low Wood Block
005	Room Kick 2	032	Funk Band Snare Rim	059	808 Tom 6	084	808 Hi-hat Open	111	Mute Cuica
006	Rock Kick 1	033	Camco Snare	060	Electronic Tom 1	085	Standard Hi-hat Close	112	Open Cuica
007	Rock Kick 2	034	Camco Snare Rim	061	Electronic Tom 2	086	Jazz Hi-hat Close	113	Mute Triangle
008	Acoustic Kick 1	035	Brush Snare 1	062	Electronic Tom 3	087	Electronic Hi-hat Close	114	Open Triangle
009	Acoustic Kick 2	036	Brush Snare Rim	063	Electronic Tom 4	088	808 Hi-hat Close	115	Shaker
010	Hiphop Kick 1	037	Electronic Snare 1	064	Electronic Tom 5	089	Standard Hi-hat Pedal	116	Jingle Bell
011	Hiphop Kick 2	038	Electronic Snare 2	065	Electronic Tom 6	090	Jazz Hi-hat Pedal	117	Belltrees
012	Funk Kick 1	039	808 Snare	RIDE		091	Electronic Hi-hat Pedal	118	Castanets
013	Funk Kick 2	040	House Snare 1	066	Classic Ride 1	092	808 Hi-hat Pedal	119	Mute Surdo
014	Jazz Kick 1	041	House Snare 2	067	Classic Ride Bell 1	PERCUSSION		120	Open Surdo
015	Jazz Kick 2	TOM		068	Classic Ride 2	093	High Bongo		
016	Electronic Kick 1	042	Classic Tom 1	069	Classic Ride Bell 2	094	Low Bongo		
017	Electronic Kick 2	043	Classic Tom 2	070	Rock Ride	095	Mute High Conga		
018	808 Kick	044	Classic Tom 3	071	808 Ride	096	Open High Conga		
019	House Kick 1	045	Classic Tom 4	CRASH		097	Low Conga		
020	House Kick 2	046	Classic Tom 5	072	Standard Crash 1	098	High Timbale		
SNARE		047	Classic Tom 6	073	Standard Crash 2	099	Low Timbale		
021	Classic Snare 1	048	Camco Tom 1	074	Rock Crash 1	100	High Agogo		
022	Classic Snare Rim 1	049	Camco Tom 2	075	Rock Crash 2	101	Low Agogo		
023	Classic Snare 2	050	Camco Tom 3	076	Splash 1	102	Cabasa		
024	Classic Snare Rim 2	051	Camco Tom 4	077	Splash 2	103	Maracas		
025	Room Snare 1	052	Camco Tom 5	078	Brush Carsh	104	Short Whistle		
026	Room Snare 2	053	Camco Tom 6	079	808 Crash 1	105	Long Whistle		
027	Acoustic Snare 1	054	808 Tom 1	080	808 Crash 2	106	Short Guiro		

Preset Pattern List

No.	Name	Tempo	Kit	No.	Name	Tempo	Kit
001	Fusion 1	103	1	022	Latin Dance	126	5
002	Cool Funk	125	5	023	Swing	172	6
003	Country	168	3	024	Latin Jazz 2	126	7
004	Electronic&Funk	116	9	025	Big Band 2	152	6
005	Modern Pop	136	1	026	3/4 Jazz	120	7
006	HipHop	110	9	027	Jazz	150	7
007	Latin Jazz 1	130	7	028	6/8 Ballad	96	3
008	Funk 1	120	5	029	Pop Ballad	80	3
009	Big Band 1	170	6	030	Pop Bossa	120	2
010	Funk 2	112	1	031	16Beat Pop	120	5
011	Pop Funk 1	112	1	032	Pop Shuffle	86	5
012	Fusion 2	112	1	033	Samba	236	1
013	Funk 3	120	5	034	Mambo	126	5
014	Fusion 3	108	1	035	Latin Rock	136	1
015	Fusion 4	116	1	036	Latin Pop	126	5
016	Pop Funk 2	106	5	037	Guitar Bossa	84	5
017	R&B	86	9	038	Country Blues	128	3
018	Drum & Bass 1	168	9	039	Rock	100	1
019	Break Beat	108	5	040	Reggae	78	1
020	Dance	130	9	041	60's Rock	120	2
021	Drum & Bass 2	170	1	042	Blues	96	2
				Demo Funk	100	1	

GM Backing Instrument List

PIANO

- 1 Acoustic Grand Piano
- 2 Bright Acoustic Piano
- 3 Electric Grand Piano
- 4 Honky-Tonk Piano
- 5 E.Piano 1
- 6 E.Piano 2
- 7 Harpsichord
- 8 Clavi

MALLET

- 9 Celesta
- 10 Glockenspiel
- 11 Music Box
- 12 Vibraphone
- 13 Marimba
- 14 Xylophone
- 15 Tubular Bells
- 16 Dulcimer

ORGAN

- 17 Drawbar Organ
- 18 Percussive Organ
- 19 Rock Organ
- 20 Church Organ
- 21 Reed Organ
- 22 Accordion
- 23 Harmonica
- 24 Tango Accordion

GUITAR

- 25 Nylon Guitar
- 26 Steel Guitar
- 27 Jazz Guitar
- 28 Clean Guitar
- 29 Muted Guitar
- 30 Overdriven Guitar
- 31 Distortion Guitar
- 32 Guitar Harmonics

BASS

- 33 Acoustic Bass
- 34 Finger Bass
- 35 Pick Bass
- 36 Fretless Bass
- 37 Slap Bass 1
- 38 Slap Bass 2
- 39 Synth Bass 1
- 40 Synth Bass 2

STRINGS

- 41 Violin
- 42 Viola
- 43 Cello
- 44 Contrabass
- 45 Tremolo Strings
- 46 Pizzicato Strings
- 47 Orchestral Harp
- 48 Timpani

STRINGS ENSEMBLE

- 49 Strings Ensemble 1
- 50 Strings Ensemble 2
- 51 Synth Strings 1
- 52 Synth Strings 2
- 53 Choir Aahs
- 54 Voice Oohs
- 55 Synth Voice
- 56 Orchestra Hit

BRASS

- 57 Trumpet
- 58 Trombone
- 59 Tuba
- 60 Muted Trumpet
- 61 French Horn
- 62 Brass Section
- 63 Synth Brass 1
- 64 Synth Brass 2

REED

- 65 Soprano Sax
- 66 Alto Sax
- 67 Tenor Sax
- 68 Baritone Sax
- 69 Oboe
- 70 English Horn
- 71 Bassoon
- 72 Clarinet

PIPE

- 73 Piccolo
- 74 Flute
- 75 Recorder
- 76 Pan Flute
- 77 Blown Bottle
- 78 Shakuhachi
- 79 Whistle
- 80 Ocarina

LEAD

- 81 Lead1 (square)
- 82 Lead2 (sawtooth)
- 83 Lead3 (calliope)
- 84 Lead4 (chiff)
- 85 Lead5 (charang)
- 86 Lead6 (voice)
- 87 Lead7 (fifths)
- 88 Lead8 (bass & Lead)

PAD

- 89 Pad1 (newage)
- 90 Pad2 (warm)
- 91 Pad3 (Polysynth)
- 92 Pad4 (choir)
- 93 Pad5 (bowed)
- 94 Pad6(metallic)
- 95 Pad7 (halo)
- 96 Pad8 (sweep)

EFFECTS

- 97 FX1 (rain)
- 98 FX2 (soundtrack)
- 99 FX3 (crystal)
- 100 FX4 (atmosphere)
- 101 FX5 (brightness)
- 102 FX6 (goblins)
- 103 FX7 (echoes)
- 104 FX8 (sci-fi)

ETHNIC

- 105 Sitar
- 106 Banjo
- 107 Shamisen
- 108 Koto
- 109 Kalimba
- 110 Bagpipe
- 111 Fiddle
- 112 Shanai

PERCUSSIVE

- 113 Tinkle Bell
- 114 Agogo
- 115 Steel Drums
- 116 Wood Block
- 117 Taiko Drum
- 118 Melodic Tom
- 119 Synth Drum
- 120 Reverse Cymbal

SOUND EFFECTS

- 121 Guitar Fret Noise
- 122 Breath Noise
- 123 Seashore
- 124 Bird Tweet
- 125 Telephone Ring
- 126 Helicopter
- 127 Applause
- 128 Gunshot

GM Drum Kit List

NET NO.	Standard 1 (bank 0)	Standard 2 (bank 4)	Room (bank 8)	Rock (bank 16)	Funk (bank 17)
27-D#1	High Q	<-	<-	<-	<-
28-E1	Slap	<-	<-	<-	<-
29-F1	Scratch Push	<-	<-	<-	<-
30-F#1	Scratch Pull	<-	<-	<-	<-
31-G1	Sticks	<-	<-	<-	<-
32-G#1	Square Click	<-	<-	<-	<-
33-A1	Metronome Click	<-	<-	<-	<-
34-A#1	Metronome Bell	<-	<-	<-	<-
35-B1	Acoustic Bass Drum	<-	Room Bass Drum 1	Rock Bass Drum 1	Funk Bass Drum 1
36-C2	Standard 1 Bass Drum	Standard 2 Bass Drum	Room Bass Drum 2	Rock Bass Drum 2	Funk Bass Drum 2
37-C#2	Side Stick	<-	<-	<-	<-
38-D2	Standard 1 Snare	Standard 2 Snare	Room Snare	Rock Snare	Funk Snare
39-D#2	Hand Clap	<-	<-	<-	<-
40-E2	Standard 1 Snare Rim	Standard 2 Snare Rim	Room Snare Rim	Rock Snare Rim	Funk Snare Rim
41-F2	Standard 1 Tom 6	Standard 2 Tom 6	Room Tom 6	Rock Tom 6	Funk Tom 6
42-F#2	Standard 1 Hi-hat Close	Standard 2 Hi-hat Close	Room Hi-hat Close	Rock Hi-hat Close	Funk Hi-hat Close
43-G2	Standard 1 Tom 5	Standard 2 Tom 5	Room Tom 5	Rock Tom 5	Funk Tom 5
44-G#2	Standard 1 Hi-hat Pedal	Standard 2 Hi-hat Pedal	Room Hi-hat Pedal	Rock Hi-hat Pedal	Funk Hi-hat Pedal
45-A2	Standard 1 Tom 4	Standard 2 Tom 4	Room Tom 4	Rock Tom 4	Funk Tom 4
46-A#2	Standard 1 Hi-hat Open	Standard 2 Hi-hat Open	Room Hi-hat Open	Rock Hi-hat Open	Funk Hi-hat Open
47-B2	Standard 1 Tom 3	Standard 2 Tom 3	Room Tom 3	Rock Tom 3	Funk Tom 3
48-C3	Standard 1 Tom 2	Standard 2 Tom 2	Room Tom 2	Rock Tom 2	Funk Tom 2
49-C#3	Standard 1 Crash 1	Standard 2 Crash 1	Room Crash 1	Rock Crash 1	Funk Crash 1
50-D3	Standard 1 Tom 1	Standard 2 Tom 1	Room Tom 1	Rock Tom 1	Funk Tom 1
51-D#3	Standard 1 Ride	Standard 2 Ride	Room Ride	Rock Ride	Funk Ride
52-E3	Chinese Cymbal 1	<-	<-	<-	<-
53-F3	Ride Bell	<-	Room Ride Bell	Rock Ride Bell	<-
54-F#3	Tambourine	<-	<-	<-	<-
55-G3	Splash Cymbal	<-	Room Splash Cymbal	Rock Splash Cymbal	<-
56-G#3	Standard 1 Cowbell	Standard 2 Cowbell	Room Cowbell	Rock Cowbell	<-
57-A3	Standard 1 Crash 2	Standard 2 Crash 2	Room Crash 2	Rock Crash 2	Funk Crash 2
58-A#3	Vibra-slap	<-	<-	<-	<-
59-B3	Ride Cymbal	<-	<-	<-	<-
60-C4	Hi Bongo	<-	<-	<-	<-
61-C#4	Low Bongo	<-	<-	<-	<-
62-D4	Mute Hi Conga	<-	<-	<-	<-
63-D#4	Open Hi Conga	<-	<-	<-	<-
64-E4	Low Conga	<-	<-	<-	<-
65-F4	High Timbale	<-	<-	<-	<-
66-F#4	Low Timbale	<-	<-	<-	<-
67-G4	High Agogo	<-	<-	<-	<-
68-G#4	Low Agogo	<-	<-	<-	<-
69-A4	Cabasa	<-	<-	<-	<-
70-A#4	Maracas	<-	<-	<-	<-
71-B4	Short Whistle	<-	<-	<-	<-
72-C5	Long Whistle	<-	<-	<-	<-
73-C#5	Short Guiro	<-	<-	<-	<-
74-D5	Long Guiro	<-	<-	<-	<-
75-D#5	Claves	<-	<-	<-	<-
76-E5	Hi Wood Block	<-	<-	<-	<-
77-F5	Low Wood Block	<-	<-	<-	<-
78-F#5	Mute Cuica	<-	<-	<-	<-
79-G5	Open Cuica	<-	<-	<-	<-
80-G#5	Mute Triangle	<-	<-	<-	<-
81-A5	Open Triangle	<-	<-	<-	<-
82-A#5	Shaker	<-	<-	<-	<-
83-B5	Jingle Bell	<-	<-	<-	<-
84-C6	Bell Tree	<-	<-	<-	<-
85-C#6	Castanets	<-	<-	<-	<-
86-D6	Mute Surdo	<-	<-	<-	<-
87-D#6	Open Surdo	<-	<-	<-	<-

GM Drum Kit List

NET NO.	Electronic (bank 24)	808 (bank 25)	House (bank 28)	Jazz (bank 32)	Brush (bank 40)
27-D#1	<-	<-	<-	<-	<-
28-E1	<-	<-	<-	<-	<-
29-F1	<-	<-	<-	<-	<-
30-F#1	<-	<-	<-	<-	<-
31-G1	<-	<-	<-	<-	<-
32-G#1	<-	<-	<-	<-	<-
33-A1	<-	<-	<-	<-	<-
34-A#1	<-	<-	<-	<-	<-
35-B1	Electronic Bass Drum 1	808 Bass Drum 1	House Bass Drum 1	Jazz Bass Drum 1	Brush Bass Drum 1
36-C2	Electronic Bass Drum 2	808 Bass Drum 2	House Bass Drum 2	Jazz Bass Drum 2	Brush Bass Drum 2
37-C#2	<-	<-	<-	<-	<-
38-D2	Electronic Snare	808 Snare	House Snare	Jazz Snare	Brush Snare
39-D#2	<-	<-	House Hand Clap	<-	<-
40-E2	Electronic Snare Rim	808 Snare Rim	House Snare Rim	Jazz Snare Rim	Brush Snare Rim
41-F2	Electronic Tom 6	808 Tom 6	House Tom 6	Jazz Tom 6	Brush Tom 6
42-F#2	Electronic Hi-hat Close	808 Hi-hat Close	House Hi-hat Close	Jazz Hi-hat Close	<-
43-G2	Electronic Tom 5	808 Tom 5	House Tom 5	Jazz Tom 5	Brush Tom 5
44-G#2	Electronic Hi-hat Pedal	808 Hi-hat Pedal	House Hi-hat Pedal	Jazz Hi-hat Pedal	<-
45-A2	Electronic Tom 4	808 Tom 4	House Tom 4	Jazz Tom 4	Brush Tom 4
46-A#2	Electronic Hi-hat Open	808 Hi-hat Open	House Hi-hat Open	Jazz Hi-hat Open	<-
47-B2	Electronic Tom 3	808 Tom 3	House Tom 3	Jazz Tom 3	Brush Tom 3
48-C3	Electronic Tom 2	808 Tom 2	House Tom 2	Jazz Tom 2	Brush Tom 2
49-C#3	<-	808 Crash 1	<-	<-	Brush Crash 1
50-D3	Electronic Tom 1	808 Tom 1	House Tom 1	Jazz Tom 1	Brush Tom 1
51-D#3	<-	<-	<-	Jazz Ride	Brush Ride
52-E3	<-	<-	<-	<-	<-
53-F3	<-	<-	<-	<-	<-
54-F#3	<-	<-	<-	<-	<-
55-G3	<-	<-	<-	<-	<-
56-G#3	<-	<-	<-	<-	<-
57-A3	<-	808 Crash 2	<-	ChineseCymbal 2	Brush Crash 2
58-A#3	<-	<-	<-	<-	<-
59-B3	<-	<-	<-	<-	<-
60-C4	<-	<-	<-	<-	<-
61-C#4	<-	<-	<-	<-	<-
62-D4	<-	808 Mute Hi Conga	<-	<-	<-
63-D#4	<-	808 Open Hi Conga	<-	<-	<-
64-E4	<-	808 Low Conga	<-	<-	<-
65-F4	<-	<-	<-	<-	<-
66-F#4	<-	<-	<-	<-	<-
67-G4	<-	<-	<-	<-	<-
68-G#4	<-	<-	<-	<-	<-
69-A4	<-	<-	<-	<-	<-
70-A#4	<-	808 Maracas	<-	<-	<-
71-B4	<-	<-	<-	<-	<-
72-C5	<-	<-	<-	<-	<-
73-C#5	<-	<-	<-	<-	<-
74-D5	<-	<-	<-	<-	<-
75-D#5	<-	808 Claves	<-	<-	<-
76-E5	<-	<-	<-	<-	<-
77-F5	<-	<-	<-	<-	<-
78-F#5	<-	<-	<-	<-	<-
79-G5	<-	<-	<-	<-	<-
80-G#5	<-	<-	<-	<-	<-
81-A5	<-	<-	<-	<-	<-
82-A#5	<-	<-	<-	<-	<-
83-B5	<-	<-	<-	<-	<-
84-C6	<-	<-	<-	<-	<-
85-C#6	<-	<-	<-	<-	<-
86-D6	<-	<-	<-	<-	<-
87-D#6	<-	<-	<-	<-	<-

MIDI Implementation Chart

	Function...	Transmitted	Recognized	Remarks
Basic Channel	Default	10 ch	1-16	
	Changed	X	X	
	Default	X	X	
Mode	Messages	X	X	
	Altered	*****	*****	
Note Number:	True voice	0-127 *****	0-127 0-127	
Velocity	Note on	O 99H, V=1-127	0-127	
	Note off	O (9 9H. V=0)	0-127	
After Touch	Key's	X	X	
	Channel's	X	X	
Pitch Bend		X	O	
Control Change	0	X	O	Bank Select
	1	X	O	Modulation
	5	X	O	Portamento Time
	6	X	O	Data Entry
	7	X	O	Volume
	10	X	O	Pan
	11	X	O	Expression
	64	X	O	Sustain Pedal
	65	X	O	Portamento ON/OFF
	66	X	O	Sostenuto Pedal
	67	X	O	Soft Pedal
	80	X	O	Reverb Program
	81	X	O	Chorus Program
	91	X	O	Reverb Level
	93	X	O	Chorus Level
	120	X	O	All Sound OFF
	121	X	O	Reset All Controller
	123	X	O	All Notes OFF
Program Change		X	O	
System Exclusive		X	O	
System : Song Position		X	X	
Common : Song Select		X	X	
	: Tune	X	X	
System : Clock		O	X	START \ STOP
Real Time : Commands		O	X	
Aux : Local ON/OFF		X	X	
	: All Notes OFF	X	X	
Messages : Active Sense		O	X	
	: Reset	X	X	

O : YES

X : NO