





TABLE OF CONTENTS

| FEATURES | page 3 |
|-------------------------------|---|
| TECHNICAL SPECIFICATIONS | page 3 |
| FREQUENCY RESPONSE GRAPH | page 3 |
| POLAR PATTERN GRAPH | page 4 |
| VOCAL 100 RETAIL BOX CONTAINS | page 4 |
| IMPORTANT INSTRUCTIONS | page 5 |
| WARRANTY AND SERVICE | page 6 |
| WARNING | page 7 |
| | FEATURES TECHNICAL SPECIFICATIONS FREQUENCY RESPONSE GRAPH POLAR PATTERN GRAPH VOCAL 100 RETAIL BOX CONTAINS IMPORTANT INSTRUCTIONS WARRANTY AND SERVICE WARNING |

Dear customer,

First of all thanks far purchasing a SOUNDSATION® product. Our mission is to satisfy all possible needs of musical instrument and professional audio and lighting users offering a wide range of products using the latest technologies.

We hope you will be satisfied with this item and, if you want to collaborate, we are looking for a feedback from you about the operation of the product and possible improvements to introduce in the next future. Go to our website <u>www.soundsationmusic.com</u> and send an e-mail with your opinion, this will help us to build instruments ever closer to customer's real requirements.

One last thing: read this manual before using the instrument, an incorrect operation can cause damages to you and to the unit. Take care!

The SOUNDSATION Team


I. FEATURES

- Specifically designed for Singers
- Ready for KARAOKE applications
- Rugged construction
- On/off switch
- Cardioid polar pattern minimizes ambient noise and feedback
- Quality components


2. TECHNICAL SPECIFICATIONS

| Туре | Dynamic |
|--------------------|-------------------------------|
| Directivity | Cardioid |
| Polar Pattern | Uni-Directional |
| Frequency Response | 70Hz - 16kHz (±3dB) |
| Sensitivity | -57dB ±3dB (0dB=1V/Pa @ 1kHz) |
| Output impedance | 300Ω ±15% |

3. FREQUENCY RESPONSE GRAPH

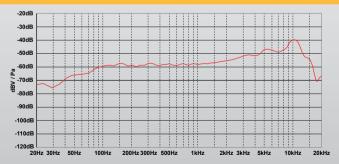

H. POLAR PATTERN GRAPH

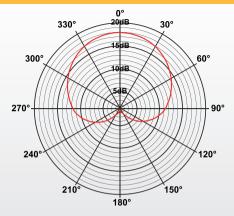

5. VOCAL 100 RETAIL BOX CONTAINS



VOCAL 100 Microphone



Microphone Cable (XLR-F - 1.4" TS Jack, 5m)



User manual

C PLEASE NOTE : Technical specifications and appearance subject to change without notice. The information contained herein is correct at the time of printing.

6. IMPORTANT INSTRUCTIONS

- 1. Read these instructions. Keep these instructions. Heed all warnings. Follow all instructions.
- 2. Pay attention to insert the connector into the device completely to avoid contact NG (no sound or staccato).
- 3. If the head of the microphone is covered by hand or brought close to the speaker, a howling sound may be generated. To prevent this, first decrease the volume, then place the microphone so that it is not pointed to the speaker and that there is a sufficient distance between the microphone and speaker.
- 4. It is important to keep foreign particles out of the grill and the windscreen because they may alter the frequency response of the microphone. The grill shall be periodically cleaned using warm, soapy water, rinsed with plain water and let dry before replacing.
- 5. Keep the microphone far from magnetic fields, otherwise permanent magnet will lose its magnetism, thus reducing capsule sensitivity and affect the sound quality.
- 6. Avoid dropping or hitting.
- 7. Insert the XLR connector into the microphone. If necessary, rotate the connector to align the key on the connector and the groove in the microphone. Push the connector into the microphone until it clicks.
- 8. Do not pull the cable strongly to avoid cable broken.
- Do not place near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 10. Only use attachments/accessories specified by the manufacturer.
- 11. Do not disassemble the microphone or modify the inside to avoid malfunction. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

7. WARRANTY AND SERVICE

All SOUNDSATION products feature a limited two-year warranty. This two-year warranty is specific to the date of purchase as shown on your purchase receipt.

The following cases/components are not covered from the above warranty:

- Any accessories supplied with the product
- Improper use
- Fault due to wear and tear
- Any modification of the product effected by the user or a third party

SOUNDSATION shall satisfy the warranty obligations by remedying any material or manufacturing faults free of charge at SOUNDSATION's discretion either by repair or by exchanging individual parts or the entire appliance. Any defective parts removed from a product during the course of a warranty claim shall become the property of SOUNDSATION.

While under warranty period, defective products may be returned to your local SOUNDSATION dealer together with original proof of purchase. To avoid any damages in transit, please use the original packaging if available. Alternatively you can send the product to SOUNDSATION SERVICE CENTER – Via Enzo Ferrari , 10 – 62017 Porto Recanati - Italy . In order to send a product to service center you need an RMA number. Shipping charges have to be covered by the owner of the product.

For further information please visit www.soundsationmusic.com

8. WARNING

PLEASE READ CAREFULLY – EU and EEA (Norway, Iceland and Liechtenstein) only



This symbol indicates that this product is not to be disposed of with your household waste, according to the WEEE Directive (2202/96/EC) and your national law.

This product should be handed over to a designated collection point, e.g., on an authorized one-for-one basis when you buy a new similar product or to an authorized collection site for recycling waste electrical and electronic equipment (WEEE).

Improper handling of this type of waste could have a possible negative impact on the environment and human health due to potentially hazardous substances that are generally associated with EEE. At the same time, your cooperation in the correct disposal of this product will contribute to the effective usage of natural resources.

For more information about where you can drop off your waste equipment for recycling, please contact your local city office, waste authority, approved WEEE scheme or your household waste disposal service.



This product is imported in EU by FRENEXPORT SPA – Via Enzo Ferrari, 10 - 62017 Porto Recanati - Italy Soundsation® is a registered trademark of FRENEXPORT SPA



www.soundsationmusic.com