

TG100 Desktop Gooseneck Microphone

 SOUNDSATION TG100 is a desktop gooseneck microphone is a professional microphone designed for applications such as large-scale conferences, public addresses, outdoor speeches etc.

It adopts a back electret condenser cartridge, which delivers bright and clear sound. This uni-directional microphone featuring high sensitivity and low self-noise can operate by battery power or via phantom power received from an external device like a mixer . Its flexible gooseneck can be adjusted smoothly and quietly to fit any needs and situations and a red LED conveniently mark the on-off state. The zinc base of the microphone has been designed with focus on stability and duration over time.

TECHNICAL SPECIFICATIONS

Element : Φ9.7mm Back Electrect Condenser Polar Pattern: Uni-directional Frequency Response: 100Hz-13kHz Sensitivity: -38dB±3dB(0dB=1V/Pa at 1kHz) Output Impedance: 200Ω±30%(at 1kHz) Operating Voltage: Phantom Power 9-52V or 3V Battery

Battery Type: AA/UM3,1.5V

USAGE:


 Install two 1.5V AA batteries at the base of the gooseneck microphones. (be aware of their polarities). If using the phantom power, please connect the parts according to the following drawing.



- 2. Connect the gooseneck microphone to its base.
- Plug the XLR connector of the attached cable and connect the microphone to a mixer.
- Turn the volume control down to zero then turn on the power switch of both the mixer and the microphone and adjust the volume.
- 5. The best distance from the microphone cartridge while speaking should be kept at 5 to 30 cm.

The box contains:

Gooseneck microphone Powered base (by N 2 AA 1,5 alkaline batteries or 48V phantom power) Windscreen XLR F to XLR M 3 meter cable Two AA size batteries

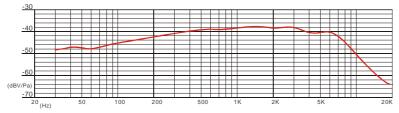

WARNING

- 1. Do not cover the microphone cartridge by hands or install the unit close to speakers as it may cause howling noise. If this happens, simply turn down the volume, take the microphone further away from the speakers, and let the cartridge not face the speakers
- 2. Only use attachments/accessories specified by the manufacturer.
- 3. Unplug this apparatus during lightning storms or when unused for long periods of time.
- 4. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

WARRANTY AND SERVICE

All SOUNDSATION products feature a limited two-year warranty. This two-year warranty is specific to the date of purchase as shown on your purchase receipt.

The following cases/components are not covered from the above warranty :

- Any accessories supplied with the product
- Improper use
- Fault due to wear and tear
- Any modification of the product effected by the user or a third party

SOUNDSATION shall satisfy the warranty obligations by remedying any material or manufacturing faults free of charge at SOUNDSATION's discretion either by repair or by exchanging individual parts or the entire appliance. Any defective parts removed from a product during the course of a warranty claim shall become the property of SOUNDSATION

While under warranty period, defective products may be returned to your local SOUNDSATION dealer together with original proof of purchase. To avoid any damages in transit, please use the original packaging if available. Alternatively you can send the product to SOUNDSATION SERVICE CENTER – Via Enzo Ferrari , 10 – 62017 Porto Recanati - Italy . In order to send a product to service center you need an RMA number. Shipping charges have to be covered by the owner of the product.

For further information please visit www.soundsationmusic.com

PLEASE READ CAREFULLY – EU and EEA (Norway, Iceland and Liechtenstein) only



This symbol indicates that this product is not to be disposed of with your household waste, according to the WEEE Directive (2202/96/EC) and your national law.

This product should be handed over to a designated collection point, e.g., on an authorized one-for-one basis when you buy a new similar product or to an authorized collection site for recycling waste electrical and electronic equipment (WEEE).

Improper handling of this type of waste could have a possible negative impact on the environment and human health due to potentially hazardous substances that are generally associated with EEE. At the same time , your cooperation in the correct disposal of this product will contribute to the effective usage of natural resources.

For more information about where you can drop off your waste equipment for recycling , please contact your local city office , waste authority , approved WEEE scheme or your household waste disposal service.



This product is imported in EU by FRENEXPORT SPA – Via Enzo Ferrari, 10 - 62017 Porto Recanati - Italy