

NUX

Stageman II

AC-80

Acoustic Amplifier

箱琴数字效果音箱

Owner's Manual

使用手册



WARNING

To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.

CAUTION

This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.



The lightning symbol within a triangle means, “Electrical caution!” It indicates the presence of information about operating voltage and potential risks of electrical shock.




The exclamation point within a triangle means, “Caution!” Please read the information next to all caution signs.

Introduction.....	02
Control Panel.....	03
Rear Panel.....	07
Signal Diagram	10
Technical Specifications	11

Features

- 80 watts rich warm sound acoustic amp with 6.5" premium speaker and 1" tweeter.
- 2 independent channels with routing adjustable post-effects.
- Acoustic Impulse Response.
- Battery power for busking application.
- Drum & Loop (60s phrase loop).
- Bluetooth Audio Stream.
- Free APP controller.
- USB firmware update.

NUX Stageman II (AC-80) is an upgrade version from Stageman AC-50 acoustic guitar amplifier. The feature is analog preamp with nice Core-Image post-effects. For Stageman II, we design specific EQ scenes for finger style, and strum style in channel 1. NUX also has very intelligent acoustic IR application for channel 1, you can engage Acoustic IR by APP. Acoustic IR is the new trend to make your acoustic sound as natural as micing. Stageman II keeps Drum & Loop, you can control the function by the original NUX NMP-2 foot controller.

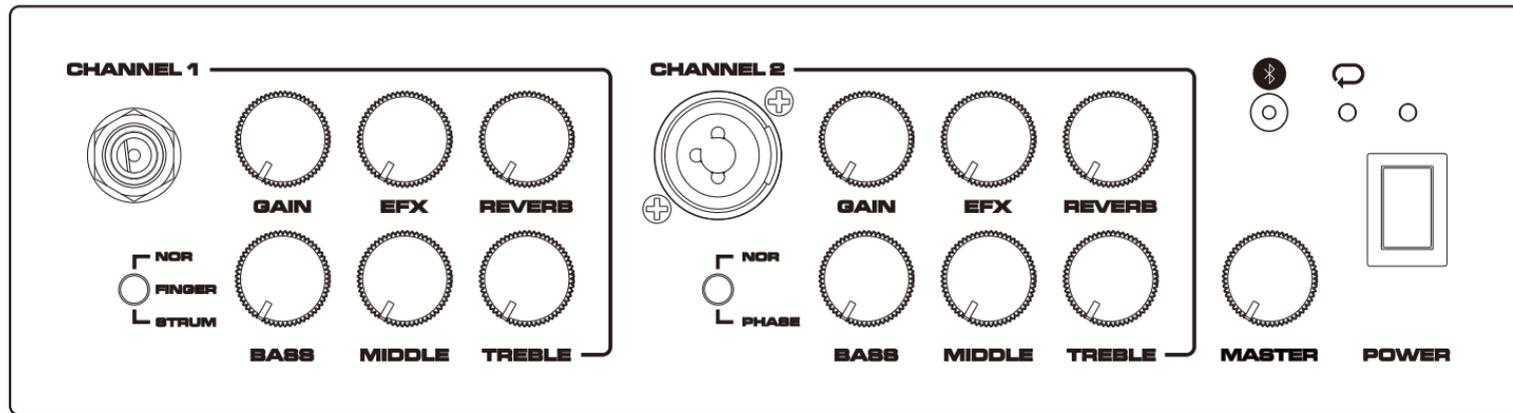

CHANNEL 1

1. INPUT JACK



Connect electric-acoustic guitar with cable to the 1/4" INPUT jack.

2. Ch1 3-WAY TOGGLE SWITCH



You can choose 3 different EQ scenes for channel 1 input.
 NOR=Normal means flat EQ
 FINGER= Finger Style means a little bit bright,
 STRUM= Strum Style means strong mid-low end response.

3. GAIN KNOB



Controls the input level.

4. BASS / MIDDLE / TREBLE KNOBS



These 3 knobs control related low / mid / high end response.

5. REVERB KNOB




Controls Reverb MIX level.

6. EFX KNOB



Controls related effect MIX, you can choose the effect model through APP.

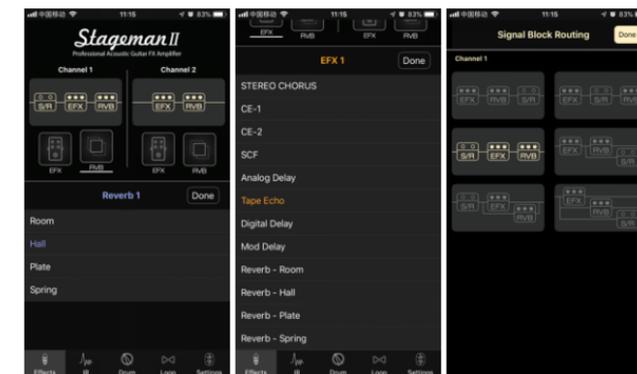

CHANNEL 2

1. COMBO INPUT JACK



You can connect with electric-acoustic guitar or dynamic microphone.

2. 2-WAY TOGGLE SWITCH



You can switch to phase to avoid feedback issue while you use dual output system.

3. GAIN KNOB



Controls the input level.

05

4. BASS / MIDDLE / TREBLE KNOBS



These 3 knobs control related low / mid / high end response.

5. EFX KNOB



Controls related effect MIX, you can choose the effect model through APP.

6. REVERB KNOB



Controls Reverb MIX level.

7. BLUETOOTH INDICATOR



While the amp connects with mobile device (Bluetooth Audio Stream), the indicator will turn on, and you can hear “bi~” from the amp. If there is no connection, the indicator will flash.

For APP connection, please open the STAGMEN APP, and go to “Settings” to choose “Current Amp” as “Stageman II”. Then click to scan devices, and you will find Stageman II. Click it, it will connect automatically. Since connected, you can tweak all the parameters from mobile phone.

8. LOOP INDICATOR



REC=Red , DUB=Orange , PLAY=Green

9. MASTER KNOB




Controls the overall level to power amp section.

10. POWER SWITCH & INDICATOR



Toggle the switch to turn on the amp, the indicator will also turn on.

06

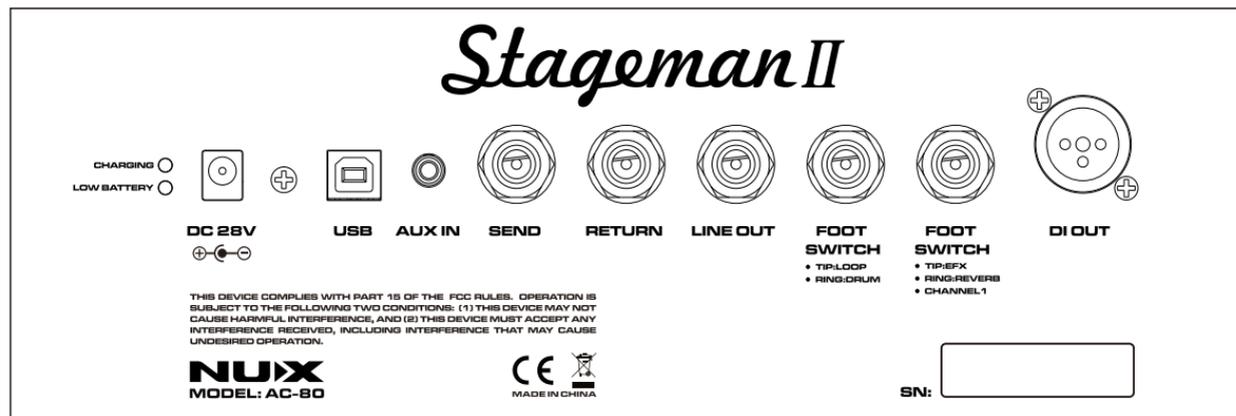

1. CHARGING & LOW BATTERY INDICATOR



While you connect with the adaptor to charge, the CHARGING indicator will turn on. While it's full of battery, the CHARGING indicator will turn off. While you use battery power, and the battery runs out of power, amplifier will turn off. In the meantime, LOW BATTERY indicator will turn on to remind you low battery status.

2. DC POWER JACK



DC 28V

Please connect with the original power adaptor to power the amp.

3. USB PORT



USB

You can do firmware update through USB port. Please visit the product page to check firmware update instruction, and download the newest firmware.

4. 1/8" AUX IN JACK



AUX IN

Connect MP3 player to play backing tracks.

5. 1/4" SEND / RETURN JACKS



SEND RETURN

You can connect other effect pedals through send / return jacks.

6. 1/4" LINE OUT



LINE OUT

Connect to mixer or recording interface as you want.


7. DRUM & LOOP FOOT SWITCH JACK




FOOT SWITCH
• TIP LOOP
• RING DRUM

Connects with NUX NMP-2, you can trigger the TIP(B foot switch) for LOOP function and trigger the RING(A foot switch) for DRUM function.

Loop Footswitch



Rhythm Footswitch



8. CHANNEL 1 FOOT SWITCH JACK




FOOT SWITCH
 • TIP: EFX
 • RING: REVERB
 • CHANNEL 1

Connects with NUX NMP-2, you can trigger the TIP(B foot switch) for EFX and trigger the RING(A foot switch) for REVERB effect.


Note: For EFX model, you can choose through APP.

9. DI OUT



DI OUT

You can use DI OUT for balanced signal to interface or PA system.

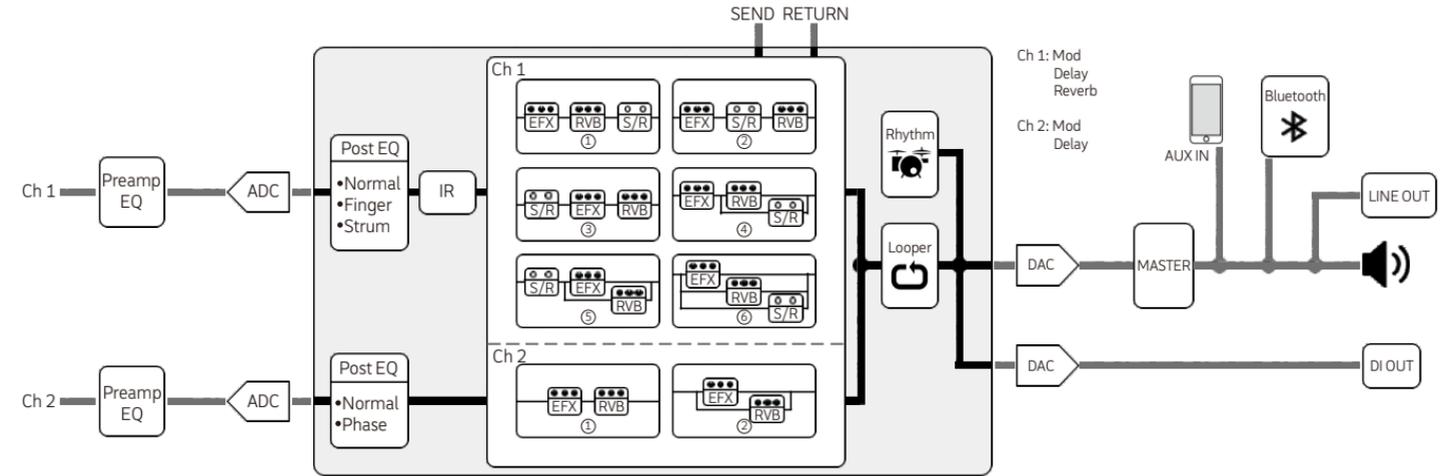

Technical Specifications

- Input Impedance:

- CHANNEL 1: 1.1M Ω
- CHANNEL 2: 100k Ω
- RETURN: 5M Ω
- AUX In: 33k Ω

- Speaker:

- Size: 6.5" Woofer x 1, 1" Tweeter
- Frequency Response Range: 50-20kHz(-3dB)

- Power:

- 80 Watt : Power Supply(Included: 4A at 28V DC)
- 40 Watt: Rechargeable Battery(Built-in)

- Battery:

- Capacity: 5000mAh
 - Battery Charging Time: 6 hours(approx. @current: 1A)
- Dimensions: 310mm(L) x 280mm(W) x 328mm(H)
 - Weight: 7.5kg

What's in the box: Power Adapter x 1, Patch Cable x 1, NMP-2 dual footswitch.

*Specifications and appearance subject to change without notice.

CE mark for European Harmonized Standards

CE Mark which is attached to our company's products of Battery mains the product is in fully conformity with the harmonized standard(s) EN 61000-6-3:2007+A1:2011 & EN 61000-6-1:2007 Under the Council Directive 2004/108/EC on Electromagnetic Compatibility.

©2020 Cherub Technology-All rights reserved. No part of this publication may be reproduced in any form without prior written permission of Cherub Technology.



www.nuxefx.com

Made in China

请注意！重要安全说明。
在连接使用前，阅读以下说明。

警告: 为减少火灾或触电的危险，请勿将本产品置于雨中或潮湿的地方。

注意: 为避免火灾或触电等危险，请勿擅自拆卸本产品。维修本产品内部部件对于非专业人员来说较为困难，若有损坏请交给专业维修人员处理。

注意: 本产品已经过测试，证明符合FCC规则第15部分的B级数字设备的限制规定。操作应符合以下两个条件：(1) 本产品不会产生有害干扰。(2) 本产品必须接受任何干扰，包括可能会导致非正常操作的干扰。

1. 仅能使用与出厂附带规格相同的电源及电源线。如果您不确定可用的电源类型，请咨询您的经销商。
2. 请勿放置在热源附近，如散热器、电热器，或其它产生高热量的设备。
3. 请勿让液体、灰尘及其他物体进入本产品。
4. 打开或取下后盖板可能会产生触电或其它危险，请勿尝试自行维修本产品。如需维修，请联系我司售后热线，或交给专业的维修人员。
5. 当设备遭遇电源线或插头损坏、不明物体进入、进水等情况，请谨慎使用，并主动联系售后维修。
6. 如果长时间不使用本产品，应拔掉电源线。
7. 避免踩踏电源线，避免过度绷紧电源线。
8. 人耳长时间接收高音量声音可能会导致无法挽回的听力损害，请始终保持“安全聆听”。



加贴该标识的设备仅按海拔2000m进行安全设计与评估，因此，仅适用于在海拔2000m以下安全使用，在海拔2000m以上使用时，可能有安全隐患。



加贴该标识的设备仅按非热带气候条件进行安全设计与评估，因此，仅适用于在非热带气候条件下安全使用，在热带气候条件下使用时，可能有安全隐患。

请遵守所有的指示和注意所有警告并保留这些说明！

介绍.....	02
控制面板.....	03
背板接口.....	07
信号链.....	10
技术规格.....	11


NUX Stageman II (AC-80) 是由Stageman (AC-50) 升级而来，纯模拟电路前级加CORE-IMAGE后级效果库这一组合设计是其主要的特点。我们在通道1特意为爱好指弹及漫弹的用户们定制了适配的EQ曲线。

原声吉他IR技术是新的流行趋势，它能让您惟妙惟肖地模拟出其它原生吉他的声音特质。AC-80的通道1就内置了这个十分趁手的功能，您可以通过配套的Stageman 应用来激活并选用您喜爱的IR来切身体验一番。

AC-80依然保留了广受好评的鼓机及录音循环功能。您可以搭配NUX NMP-2双踩钉脚踏开关来享受更为便捷的操控体验。

产品特点

- 音色温暖、丰富的80瓦输出功率原声吉他音箱。
- 内置高品质扬声器系统：6.5英寸低音扬声器，1英寸高音扬声器。
- 2个独立通道，可调节后级效果链。
- 原生吉他IR。
- 内置可充电电池，方便户外使用。
- 鼓机与录音循环功能(60秒)。
- 蓝牙无线音频串流。
- 免费配套Stageman APP(官网免费下载)。

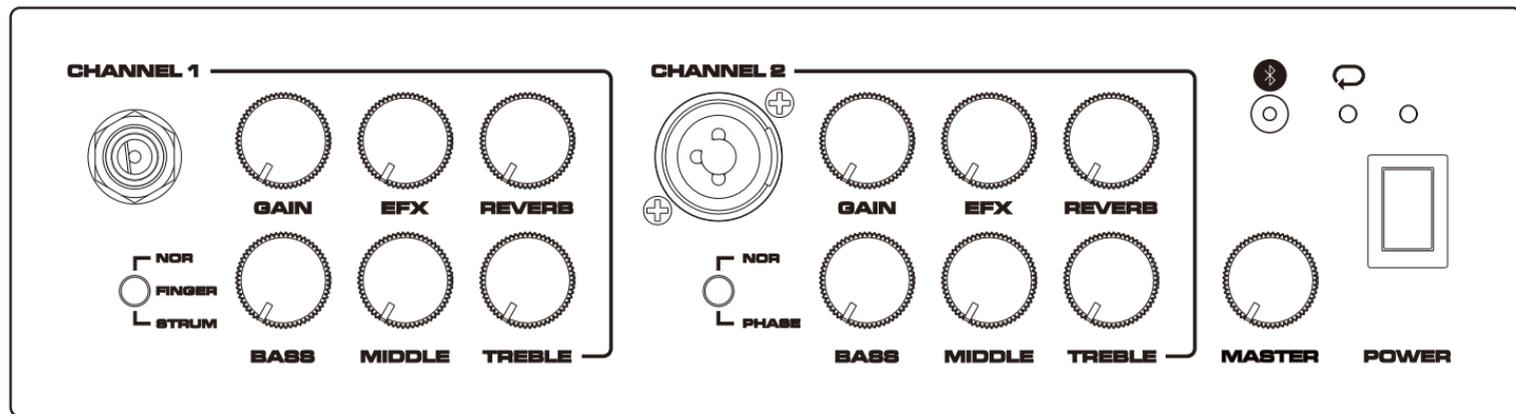

通道1 CHANNEL 1

1. INPUT接口



6.35mm输入接口，可连接原声吉他或其它带有音频输出的乐器。

2. 三档拨档开关



拨动开关至对应档位来选择EQ曲线。

NOR档：平顺的EQ曲线；

指弹(FINGER)档：较为明亮的EQ曲线；

漫弹(STRUM)档：重低音增强EQ曲线。

3. GAIN旋钮



调节所输入乐器信号的增益度。

4. BASS/MIDDLE/TREBLE旋钮



调节低频、中频、高频音色。

5. REVERB旋钮




调节混响效果音色。

6. EFX旋钮



控制当前所选效果的干湿比，您可以通过配套的应用来选择效果及调整效果链。

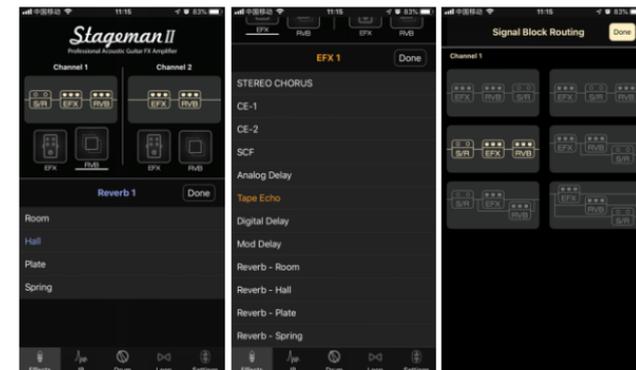

通道2 CHANNEL 2

1. 输入接口



XLR组合输入接口，可连接动圈麦克风或原声吉他。

2. 两档拨档开关



您可以将开关拨至PHASE档位，来开启相位功能；拨至NOR档位则关闭相位功能。

当有两个以上的乐器、麦克风或其它外置音频信号同时输入音箱时，您可以尝试开启或关闭相位功能，以获得您更喜爱的声音效果。

在音箱音量较大时，您也可以尝试开启或关闭相位功能来抑制回授噪音。

3. GAIN旋钮



调节输入乐器信号的增益度。

4. BASS/MIDDLE/TREBLE旋钮



调节低频、中频、高频音色。

5. EFX旋钮



控制当前所选效果的干湿比，您可以通过配套的应用来选择效果及调整效果链。

6. REVERB旋钮



调节混响效果音色。

7. 蓝牙指示灯



有蓝牙设备接入时，指示灯常亮。无设备接入时，指示灯会闪烁。蓝牙配对成功后，音箱会发出“哔”的一声提示音。

App连接指南：使用IOS或者安卓设备(手机)下载并运行配套的Stageman应用，进入设置(setting)菜单，将Stageman II选定为当前设备。然后在下方设备列表中点选“Stageman II”建立蓝牙MIDI连接，连接成功后您便可以在您的设备(手机)上调节音箱的参数了。

8. 乐句循环状态指示灯



指示灯亮红色 — 录音状态。

指示灯亮绿色 — 播放状态。

指示灯亮橙色 — 叠加录音状态。

9. Master旋钮




调节总输出音量。

10. 电源开关和指示灯



POWER

拨动电源开关打开音箱，指示灯也将点亮。

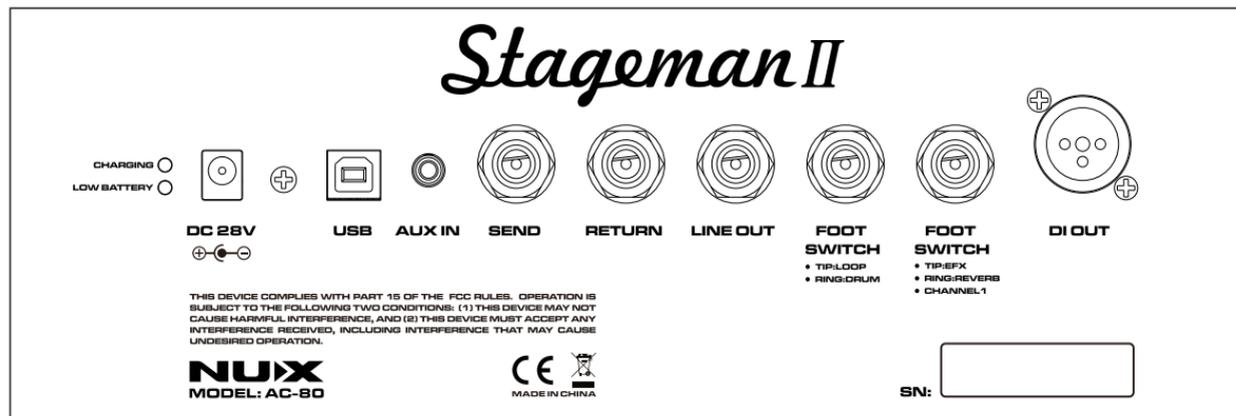

1. 充电指示灯 (Charging) 及 低电量指示灯 (LOW BATTERY)



连接附赠的电源适配器充电时充电指示灯会亮起，电池电量充满后指示灯会自动熄灭。

使用内置电池为音箱供电时，如果电量不足低电量指示灯会亮起，此时应尽快连接电源适配器为电池充电。

2. 电源输入接口 (DC 28V)



DC 28V

连接附赠的电源适配器为音箱供电或为内置电池充电。

3. USB-B接口



USB

USB-B接口，主要用于固件更新。请访问cn.nuxefx.com，然后进入Stageman II产品页面查询新固件及固件更新方法。

4. 辅助音频输入接口



AUX IN

3.5mm辅助音频输入接口，在此处连接外部音频播放设备 (例如：手机、CD播放器、MP3等)。

5. 传送/回传组合接口



SEND RETURN

您可以使用传送/回传组合接口来连接外置效果器 (链)。

6. 线路输出接口



LINE OUT

6.35mm线路输出接口，可连接调音台或录音声卡。

7. 外接踏板接口



FOOT SWITCH
• TIP LOOP
• RING DRUM

连接NMP-2时可使用踩钉A来激活/关闭鼓机，踩钉B来控制录音循环。录音循环控制流程如下图所示：

Loop Footswitch



Rhythm Footswitch



8. 通道1外接踏板接口




FOOT SWITCH
 • TIP: EFX
 • RING: REVERB
 • CHANNEL: 1

连接NMP-2时，你可以使用踩钉A来激活/关闭混响效果 (REVERB)；踩钉B来激活/关闭效果链 (EFX)。


提示：您可以使用配套的APP来选择需要的效果模型。

9. 平衡信号输出接口



DI OUT

输出平衡信号，您可以通过此接口接入调音台或与之匹配的音频设备。

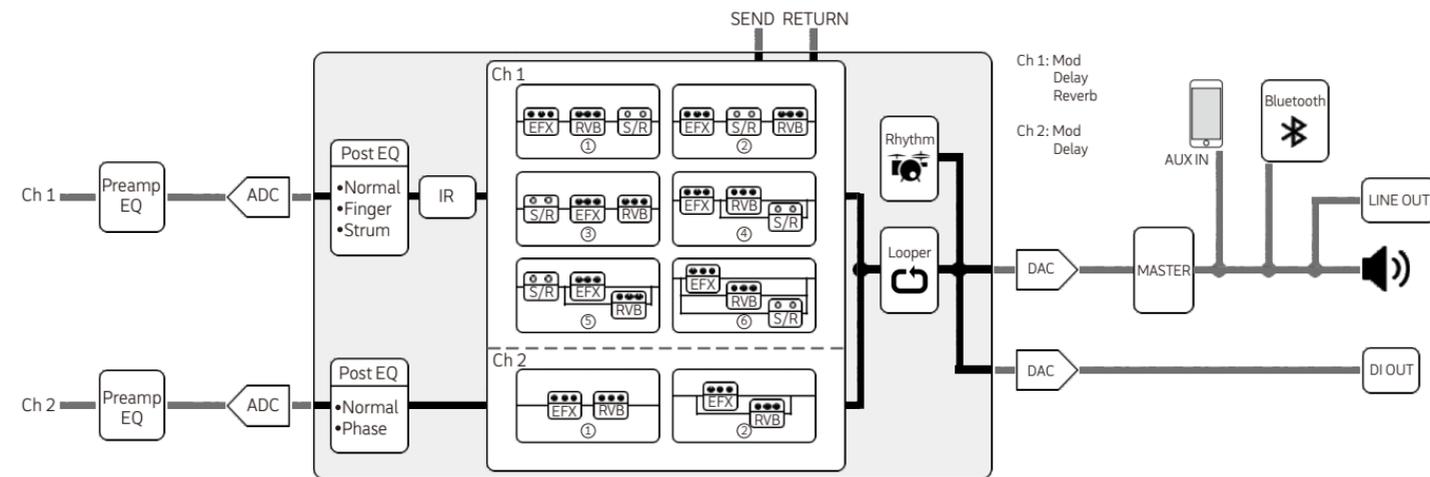

技术规格

- 输入阻抗:
 - 通道1 (CHANNEL 1): 1.1MΩ
 - 通道2 (CHANNEL 2): 100kΩ
 - 回传 (RETURN): 5MΩ
 - 辅助音频输入 (AUX-IN): 33kΩ
- 扬声器:
 - 尺寸: 6.5英寸低音扬声器 x 1, 1英寸高音扬声器 x 1
 - 频率响应范围: 50-20kHz (-3dB)
- 功率:
 - 80瓦: 适配器供电 (附赠: 28V/4A直流电源适配器)
 - 40瓦: 内置可充电电池
- 电池信息:
 - 电池容量: 5000毫安时
 - 充电时间: 约6小时 (充电电流: 1A)

- 产品尺寸: 310毫米(长) x 280毫米(宽) x 328毫米(高)
- 净重: 7.5千克

*技术规格如有变更, 恕不另行通知。

*包装内含: 电源适配器1个、6.35mm音频线1根、NMP-2双踩钉脚踏开关一个。

有关产品中所含有害物质的说明

本资料就本公司产品中所含的特定有害物质及其安全性予以说明。

本资料适用于2007年3月1日以后本公司所制造的产品。

环保使用期限



此标志适用于在中国国内销售的电子信息产品, 表示环保使用期限的年数。所谓环保使用期限是指在制造日起的规定的期限内, 产品中所含的有害物质不致引起环境污染, 不会对人体、财产造成严重的不良影响。环保使用期限仅在遵照产品使用说明, 正确使用产品的条件下才有效。不当的使用, 将会导致有害物质泄漏的危险。

产品中有毒有害物质或元素的名称及含量

部件名称	有害有毒物质或元素					
	铅(Pb)	汞(Hg)	镉(Cd)	六价铬(Cr(VI))	多溴联苯(PBB)	多溴二苯醚(PBDE)
外壳(壳体)	×	○	○	○	○	○
电子部件(印刷电路板等)	×	○	×	○	○	○
附件(电源线、交流适配器等)	×	○	○	○	○	○

○: 表示该有害有毒物质在该部件所有均质材料中的含量均在SJ/T11363-2006 标准规范的限量要求以下。

×: 表示该有害有毒物质至少在该部件的某一均质材料中的含量超出SJ/T11363-2006 标准规定的限量要求。
因根据现有的技术水平, 还没有什么物质能够代替它。

质量承诺

亲爱的**NUX**用户，在您使用本产品时，请仔细参阅产品说明书，当您有疑问和困难时，请拨打售后服务热线：

400-990-9866

- 一周内出现质量问题可退货退款
- 一月内出现质量问题可调换
- 一年内出现质量问题可免费维修
- 终身享有咨询和维修服务

* 请向销售商索取有效购买凭证并予以保存。

换修政策

一、包换政策：

1. 消费者自购机之日起1个月之内，在正常使用情况下，出现非人为的产品性能故障，且产品外观及包装保持完好的可向所购机的经销商换机。
2. 消费者在换机时应出示由经销商开出的购机收据及保修卡，否则经销商可以不予更换。

二、保修政策：

产品在购买之日起1年内，可免费享有维修服务；对于超过1年的产品及人为或不可抗力因素造成损坏的产品，我司可提供有偿维修服务。

售后服务地址

广东省珠海市高新区唐家湾镇科技九路10号
珠海市蔚科科技开发有限公司 售后服务部
邮编：519085

制造商

深圳市蔚科电子科技有限公司

生产商

珠海市蔚科科技开发有限公司

制造商地址

深圳市南山区蛇口兴华路6号南海意库1号楼507

生产商地址

珠海市高新区唐家湾镇科技九路10号

电话：0755-2686 9866 网址：www.cherub.cn

电话：0756-3689866 执行标准：Q/WKDZ 002-2020