





Ver 1.0 - Mar. 2023

TABLE OF CONTENTS

1.	FEATURES	page 4
2.	TECHNICAL SPECIFICATIONS	page 4
3.	FREQUENCY RESPONSE GRAPH	page 4
4.	POLAR PATTERN GRAPH	page 5
5.	WF-LM10 RETAIL BOX CONTAINS	page 5
6.	COMPATIBILITY CHART	page 5
7.	IMPORTANT INSTRUCTIONS	page 6
8.	WARRANTY AND SERVICE	page 7
	WARNING	

CARDIOID LAVALIER MICROPHONE

Dear customer,

First of all thanks far purchasing a SOUNDSATION $^{\circledR}$ product. Our mission is to satisfy all possible needs of musical instrument and professional audio and lighting users offering a wide range of products using the latest technologies.

We hope you will be satisfied with this item and, if you want to collaborate, we are looking for a feedback from you about the operation of the product and possible improvements to introduce in the next future. Go to our website www.soundsationmusic.com and send an e-mail with your opinion, this will help us to build instruments ever closer to customer's real requirements.

One last thing: read this manual before using the instrument, an incorrect operation can cause damages to you and to the unit. Take care!

The SOUNDSATION Team


. FEATURES

- Specifically designed for conferences, presentations and live events
- ▶ 3.5mm TS Screw-lock Jack connector for wireless bodypacks
- ▶ Electret capsule with cardioid polar pattern
- ► Foam windscreen
- ▶ Unobtrusive small clip for attaching to clothing
- ► Compact, discreet design


2. TECHNICAL SPECIFICATIONS

Impedance	680Ω ± 10%
Sensitivity	-37dB ± 2dB
Frequency Response	20Hz - 20kHz
Directivity	Uni-directional Cardioid
Working voltage	1.0V - 10V
Connector	3.5mm TS Screw-lock jack
Wire rod	Φ 2.3mm / L=1.2M

3. FREQUENCY RESPONSE GRAPH

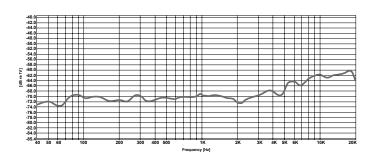


H. POLAR PATTERN GRAPH

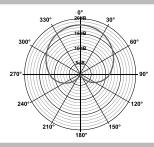

6. WF-LMIO RETAIL BOX CONTAINS







WF-LM10 Microphone Cable Microphone (3.5mm TS Screw-lock Jack)

User manual

PLEASE NOTE: Technical specifications and appearance subject to change without notice. The information contained herein is correct at the time of printing.

6. COMPATIBILITY CHART

SKU	Soundsation Model
E074E	WF-U2600HP
E076E	WF-U2300HP
E560E	WF-U2300PP
16241	WF-U1300P
J243J	WF-U216HP
J244J	WF-U216PP

5

Read these instructions. Keep these instructions. Heed all warnings.

7. IMPORTANT INSTRUCTIONS

- Follow all instructions.
- Pay attention to insert the connector completely into the device to avoid contact NG (no sound or staccato).
- If the head of the microphone is covered or brought too close to the speaker, a howling sound may be generated. To prevent this, first decrease the volume, then place the microphone so that it is not pointed too close to the speaker and that there is a sufficient distance between the microphone and speaker.
- It is important to keep foreign particles out of the capsule and the windscreen because they may alter the frequency response of the microphone.
- Keep the microphone far from magnetic fields, otherwise permanent magnet will lose its magnetism, thus reducing capsule sensitivity and affect the sound quality.
- 6. Avoid dropping or hitting.
- Insert the 3.5mm Screw-lock Jack connector into the bodypack and 7. screw it until it is firm and stable.
- Do not pull hard on the cable to prevent it from breaking.
- Do not place near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce
- 10. Only use attachments/accessories specified by the manufacturer.
- 11. Do not disassemble the microphone or modify the inside to avoid malfunction. Refer all servicing to qualified service personnel. Service is required when the device has been damaged in any way, e.g. by spilled liquids or objects dropped inside the device, exposure to rain or moisture, device has been dropped or just does not function normally.

6

8. WARRANTY AND SERVICE

All SOUNDSATION products feature a limited two-year warranty. This two-year warranty is specific to the date of purchase as shown on your purchase receipt.

The following cases/components are not covered from the above warranty:

- Any accessories supplied with the product
- Improper use
- Fault due to wear and tear
- Any modification of the product effected by the user or a third party

SOUNDSATION shall satisfy the warranty obligations by remedying any material or manufacturing faults free of charge at SOUNDSATION's discretion either by repair or by exchanging individual parts or the entire appliance. Any defective parts removed from a product during the course of a warranty claim shall become the property of SOUNDSATION.

While under warranty period, defective products may be returned to your local SOUNDSATION dealer together with original proof of purchase. To avoid any damages in transit, please use the original packaging if available. Alternatively you can send the product to SOUNDSATION SERVICE CENTER – Via Enzo Ferrari, 10 – 62017 Porto Recanati - Italy . In order to send a product to service center you need an RMA number. Shipping charges have to be covered by the owner of the product.

For further information please visit www.soundsationmusic.com

9. WARNING

PLEASE READ CAREFULLY - EU and EEA (Norway, Iceland and Liechtenstein) only



This symbol indicates that this product is not to be disposed of with your household waste, according to the WEEE Directive (2202/96/EC) and your national law.

This product should be handed over to a designated collection point, e.g., on an authorized one-for-one basis when you buy a new similar product or to an authorized collection site for recycling waste electrical and electronic equipment (WEEE).

Improper handling of this type of waste could have a possible negative impact on the environment and human health due to potentially hazardous substances that are generally associated with EEE. At the same time, your cooperation in the correct disposal of this product will contribute to the effective usage of natural resources.

For more information about where you can drop off your waste equipment for recycling, please contact your local city office, waste authority, approved WEEE scheme or your household waste disposal service.

